

COMPLETE TESTING



2100 / 3200

ELECTRICAL TEST EQUIPMENT CALIBRATOR

VERIFICATION AND CALIBRATION GUIDE





Table Of Contents

SAFETY WARNINGS 3

GENERAL 4

INSTALLING THE 3200 / 2100 CALIBRATION CONTROL PANEL 4

CALIBRATING 3200 / 2100 CALIBRATOR - INTRODUCTION..... 5

INSULATION RESISTANCE FUNCTION..... 6

 CONNECTIONS 6

 VERIFICATION METHOD..... 6

 VERIFICATION TEST POINTS 6

CONTINUITY RESISTANCE FUNCTION..... 7

 CONNECTIONS 7

 VERIFICATION METHOD..... 7

 VERIFICATION TEST POINTS 7

CONTINUITY CURRENT FUNCTION 8

 CONNECTIONS 8

 CALIBRATION METHOD..... 9

 VERIFICATION TEST POINTS 9

AC VOLTAGE SOURCE FUNCTION..... 10

 CONNECTIONS 10

 CALIBRATION METHOD..... 11

 VERIFICATION TEST POINTS 11

LOOP RESISTANCE FUNCTION..... 12

 CONNECTIONS 12

 CALIBRATION METHOD..... 14

 VERIFICATION TEST POINTS 14

RCD (RESIDUAL CURRENT DEVICE) CURRENT FUNCTION 15

 CONNECTIONS 15

 CALIBRATION METHOD..... 16

 VERIFICATION TEST POINTS 16

RCD (RESIDUAL CURRENT DEVICE) TRIP TIME FUNCTION 17

 CONNECTIONS 17

 VERIFICATION METHOD..... 18

 VERIFICATION TEST POINTS 18

PAT INSULATION RESISTANCE FUNCTION 19

 CONNECTIONS 19

 VERIFICATION METHOD..... 19

 VERIFICATION TEST POINTS 19

PAT EARTH BOND RESISTANCE FUNCTION 20

 CONNECTIONS 20

 CALIBRATION METHOD..... 21

 VERIFICATION TEST POINTS 21





PAT EARTH BOND CURRENT FUNCTION.....22
 CONNECTIONS22
 CALIBRATION METHOD.....23
 VERIFICATION TEST POINTS.....23

PAT LOAD FUNCTION.....24
 CONNECTIONS24
 VERIFICATION METHOD.....25
 VERIFICATION TEST POINTS.....25

PAT LEAKAGE CURRENT FUNCTION26
 CONNECTIONS26
 VERIFICATION METHOD.....27
 VERIFICATION TEST POINTS.....27

3200 / 2100 Verification Sheets

Appendix A

3200 / 2100 Extended Specifications

Appendix B



SAFETY WARNINGS



HIGH VOLTAGES



CONNECTIONS TO LINE

**THIS VERIFICATION AND CALIBRATION GUIDE
INVOLVES CONNECTIONS TO LINE AND
MEASUREMENT OF HIGH VOLTAGES**

***FOR THIS REASON VERIFICATION AND
CALIBRATION SHOULD ONLY BE UNDERTAKEN
BY QUALIFIED PERSONNEL***

**THIS VERIFICATION AND CALIBRATION KIT IS
PROVIDED 'AS-IS' AND TRANSMILLE SHALL
NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT,
SPECIAL OR CONSEQUENTIAL DAMAGES
OR LOSS AS A RESULT OF USING THIS GUIDE OR
VERIFICATION AND CALIBRATION LEAD SET.**



3200 / 2100 Verification & Calibration Guide


For Use With Calibration Control Panel & Calibration Lead Set

General


The steps detailed below will allow adjustment of a 3200 / 2100 Electrical Test Equipment Calibrator. This requires the use of the 3200 / 2100/3200 Calibration control Panel program supplied and the 3200 / 2100 calibration lead set kit supplied by Transmille.

Installing the 3200 / 2100 calibration control panel

To install the 3200 / 2100 Calibration Control Panel, insert the supplied CD – this should autorun. If the CD does not autorun, select START -> RUN -> AUTOCHECK.BAT

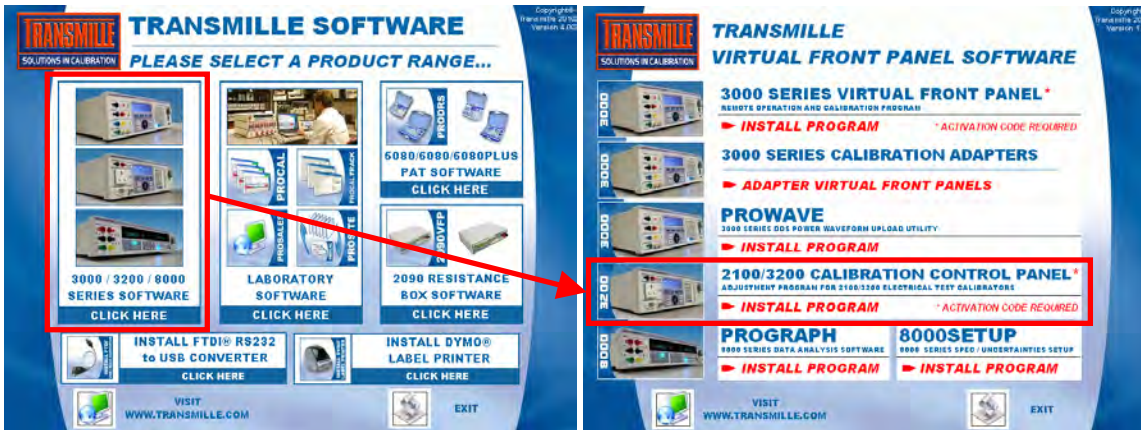

Click OK to proceed

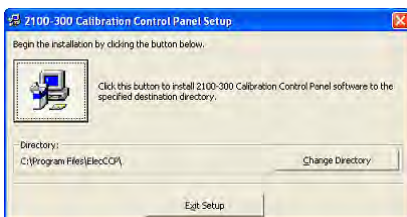


Click button to begin install



Click OK to complete installation

Calibrating 3200 / 2100 calibrator - Introduction

The 3200 / 2100 Calibration kit comprises of a set of test leads as follows :

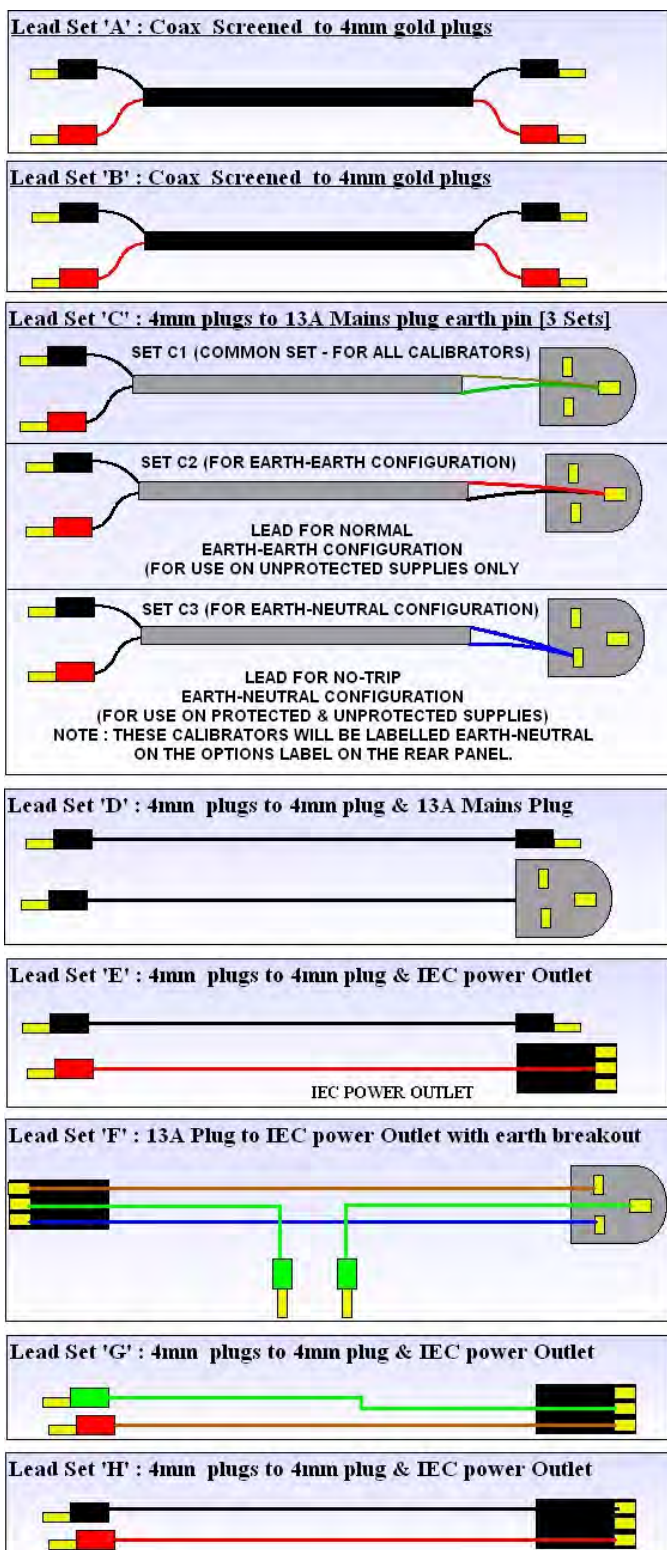

In addition a performance verification sheet is provided – this allows the 3200 / 2100 to be compared against manufacturers specifications.


Insulation Resistance Function




VERIFICATION AND CALIBRATION PROCEDURES ARE FOR USE BY QUALIFIED TECHNICIANS ONLY – OBSERVE ALL PRECAUTIONS DURING CONNECTION AND MEASUREMENT OF LINE HIGH VOLTAGES

| Equipment Required | Comments |
|--------------------|--|
| Resistance meter | Capable of measuring 2GOhm (10GOhm if 10G Option fitted) |

Connections

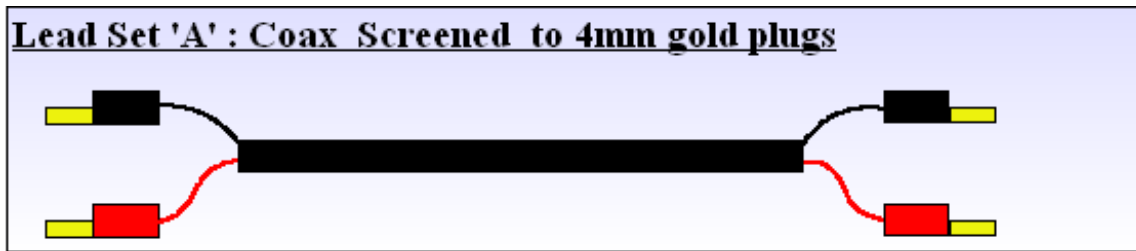

Connections for Insulation Resistance

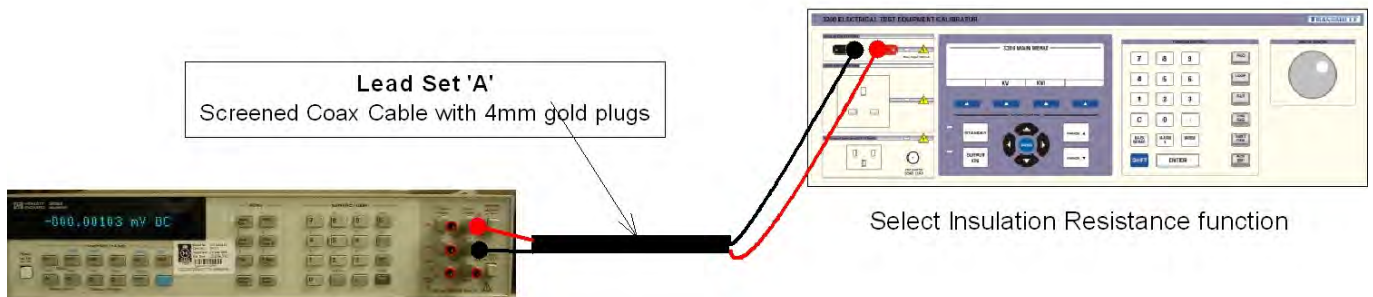

Measure resistance output using 2 wire ohms.

Verification Method

1. Connect 3200 / 2100 to meter as per diagram using **LEAD SET A**
2. Select Insulation resistance mode and test points as per verification sheet using the 3200 / 2100 front panel and record measurement obtained using 2-wire connection.

Verification Test Points

See Performance Verifications Sheet Page 1 & 2



Continuity Resistance Function



VERIFICATION AND CALIBRATION PROCEDURES ARE FOR USE BY QUALIFIED TECHNICIANS ONLY – OBSERVE ALL PRECAUTIONS DURING CONNECTION AND MEASUREMENT OF LINE HIGH VOLTAGES


| Equipment Required | Comments |
|--------------------|--|
| Resistance meter | Capable of measuring 100mOhm to 1kOhm 4-Wire mode |

Connections

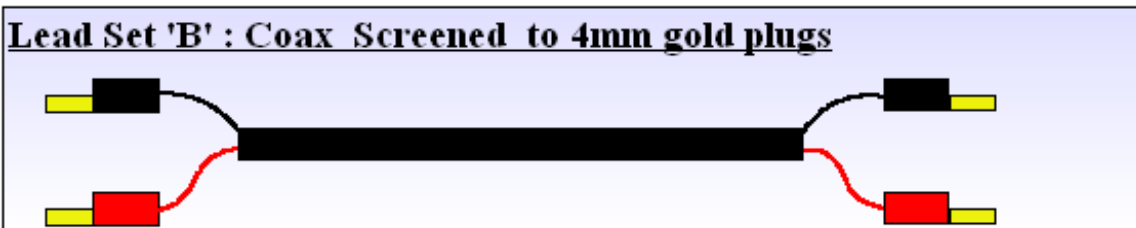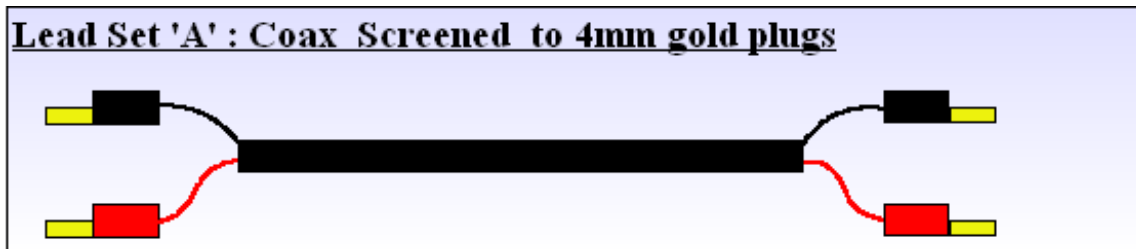

Connections for Continuity Resistance

Use DMM to measure continuity resistance using 4 wire (Kelvin) connections

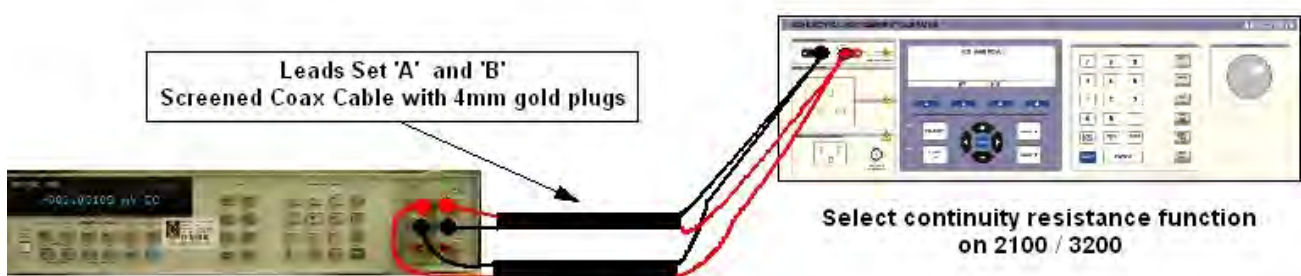

Measure resistance using 4 wire ohms function.

Verification Method

1. Connect 3200 / 2100 to meter as per diagram using **LEAD SET A** and **LEAD SET B**
2. Select test point as per verification sheet using the 3200 / 2100 front panel and record measurement obtained using 4-wire connection.

Verification Test Points

See Performance Verifications Sheet Page 2 & 3


Continuity Current Function




VERIFICATION AND CALIBRATION PROCEDURES ARE FOR USE BY QUALIFIED TECHNICIANS ONLY – OBSERVE ALL PRECAUTIONS DURING CONNECTION AND MEASUREMENT OF LINE HIGH VOLTAGES

| Equipment Required | Comments |
|---|------------------------------|
| DC Current Source eg. Multi Product Calibrator | Capable of sourcing 100mA DC |

Connections

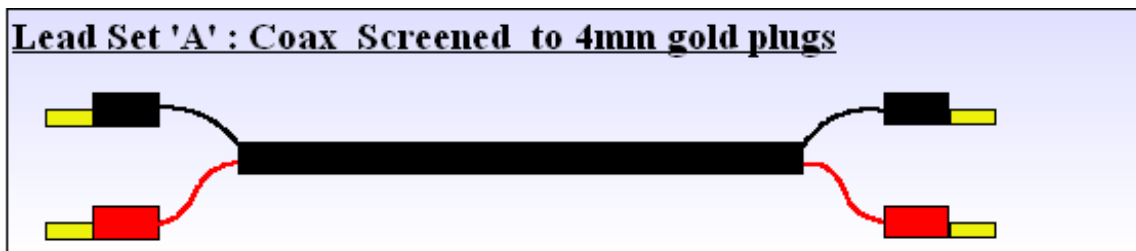

Continuity Current into 1 Ohm

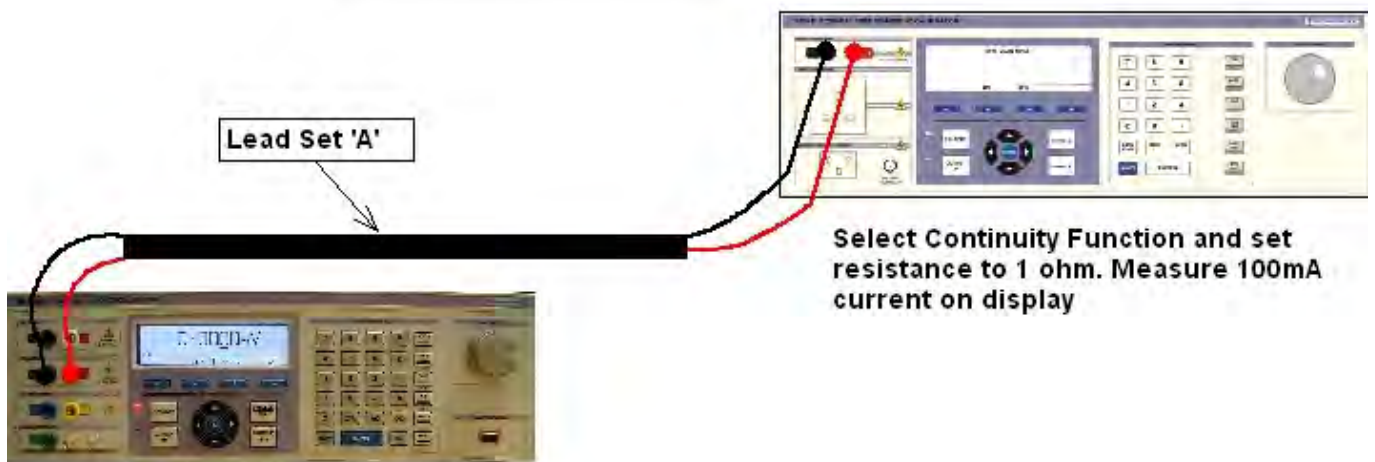


Set Calibrator to output 100mA DC


Select Continuity Function and set resistance to 1 ohm. Measure 100mA current on display

Calibration Method

1. Connect 3200 / 2100 to meter as per diagram using **LEAD SET A**
2. Select continuity test current mode on 3200 / 2100 CCP
this will set the 3200 / 2100 to **1 Ohm output**

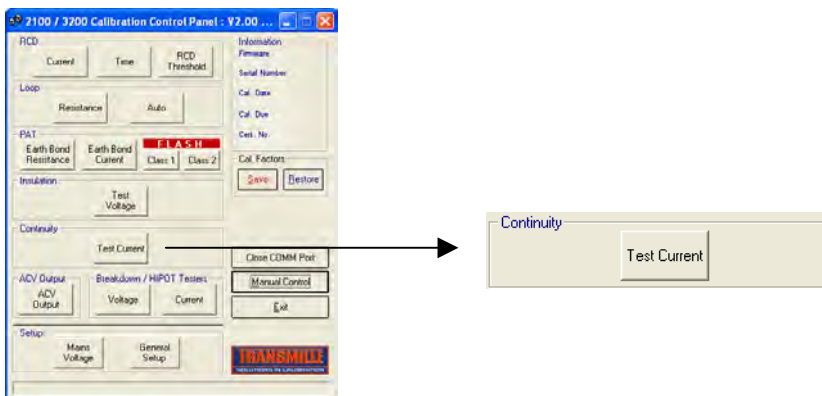


3. Set **0mA DC** output from current source
4. Adjust **ZERO OFFSET** using CCP software

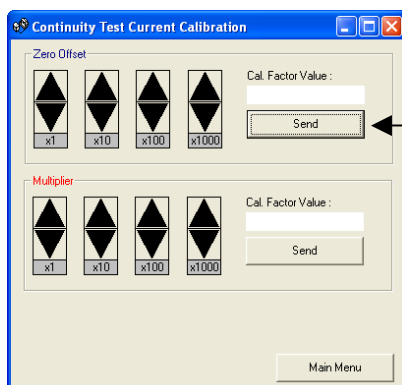

ZERO OFFSET ADJUST

Adjust cal factor using up/down buttons – note using the up/down button automatically sends cal factor to calibrator, the send button is needed only if a cal factor is manually typed into the cal factor value box.

5. Set **100mA DC** output from current source
6. Adjust **MULTIPLIER (FULL SCALE)** using CCP software

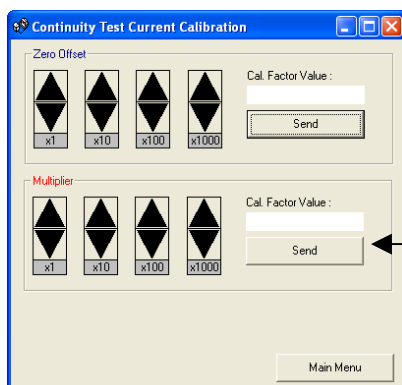

MULTIPLIER ADJUST

Adjust cal factor using up/down buttons – note using the up/down button automatically sends cal factor to calibrator, the send button is needed only if a cal factor is manually typed into the cal factor value box.

Verification Test Points

See Performance Verifications Sheet Page 4


AC Voltage Source Function




VERIFICATION AND CALIBRATION PROCEDURES ARE FOR USE BY QUALIFIED TECHNICIANS ONLY – OBSERVE ALL PRECAUTIONS DURING CONNECTION AND MEASUREMENT OF LINE HIGH VOLTAGES

| Equipment Required | Comments |
|--------------------|------------------------------------|
| AC Voltage meter | Capable of measuring up to 400V AC |

Connections

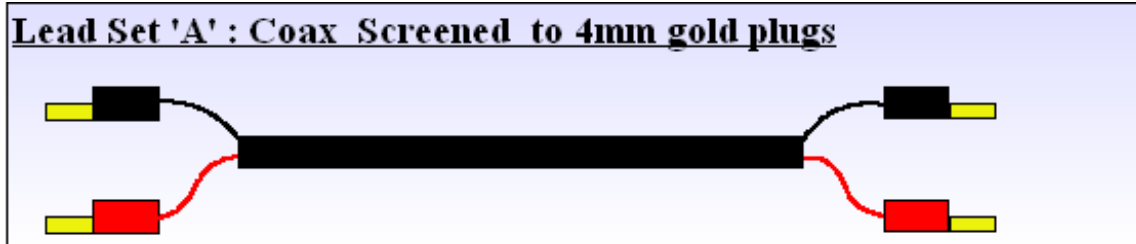


Connections for ACV Output

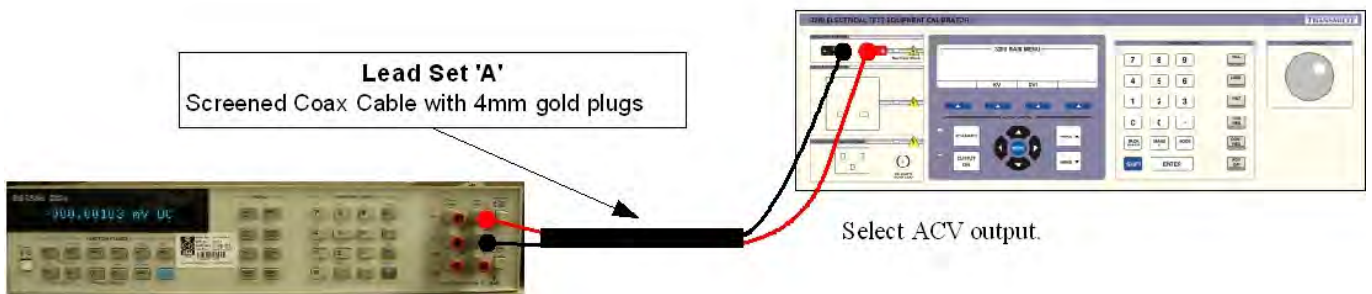


Read ACV output. Compare reading displayed on 2100 / 3200 with reading on DMM

Calibration Method

1. Connect 3200 / 2100 to meter as per diagram using **LEAD SET A**
2. Select ACV Output mode on 3200 / 2100 CCP - this will set the 3200 / 2100 to **100V Output** initially

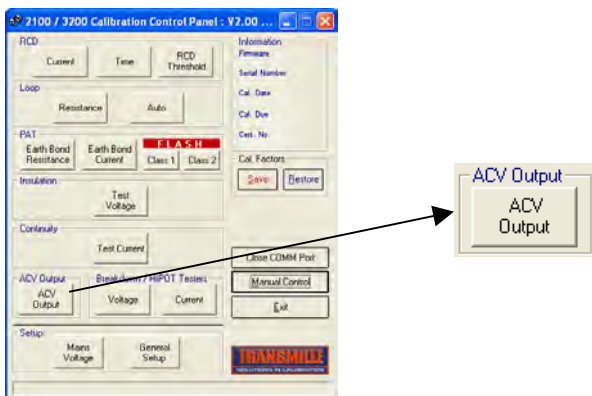

3. Adjust cal factor using CCP software adjustment control

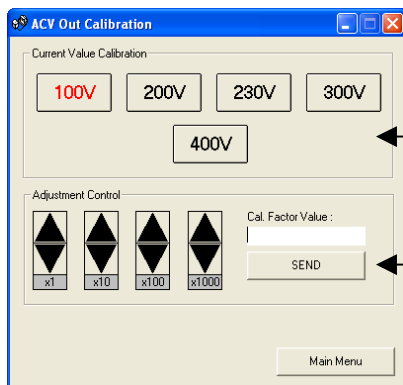

RANGE SELECTION
Select range to be calibrated here

ADJUSTMENT CONTROL
Adjust cal factor using up/down buttons – note using the up/down button automatically sends cal factor to calibrator, the send button is needed only if a cal factor is manually typed into the cal factor value box.

4. Select 200V, 230V, 300V and 400V ranges in turn and adjust each range in turn

Verification Test Points

See Performance Verifications Sheet Page 4


Loop Resistance Function



VERIFICATION AND CALIBRATION PROCEDURES ARE FOR USE BY QUALIFIED TECHNICIANS ONLY – OBSERVE ALL PRECAUTIONS DURING CONNECTION AND MEASUREMENT OF LINE HIGH VOLTAGES

| Equipment Required | Comments |
|--------------------|---------------------------------|
| DC Voltage meter | |
| DC Current Source | Capable of sourcing up to 1A DC |

Connections

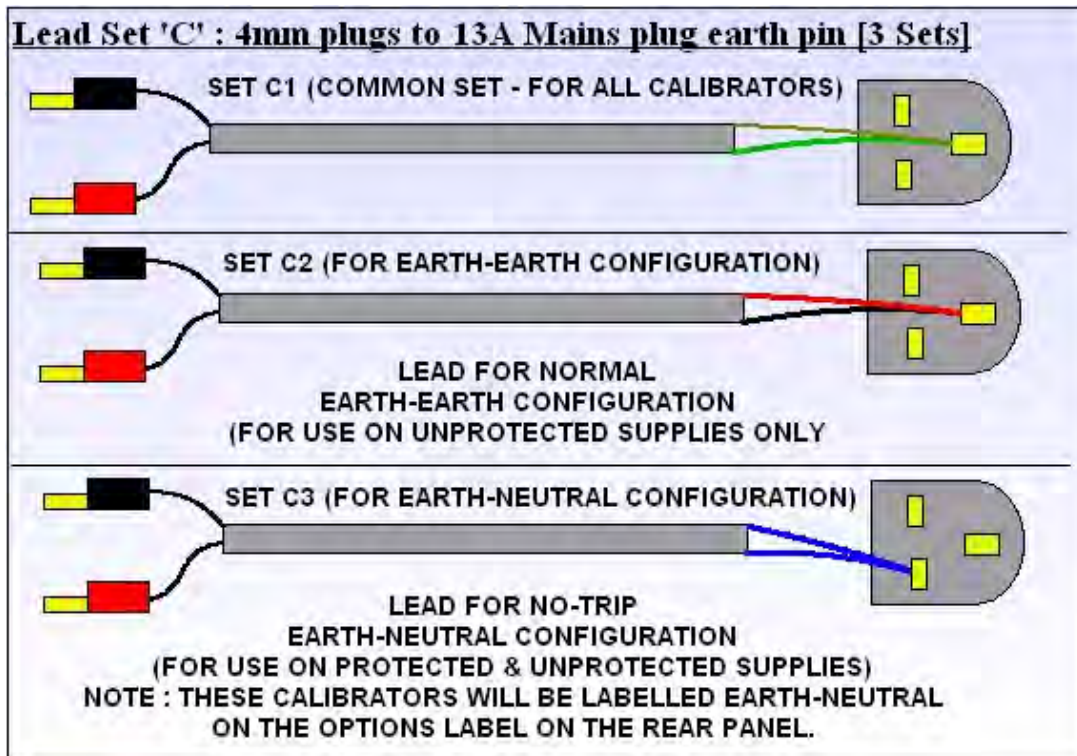

NOTES FOR USE WITH LEAD SET 'C'

Set C1
COMMON SET OF TEST LEADS (RED & BLACK LEADS) IS A COMMON SET FOR USE WITH ANY TYPE OF 2100 / 3200 CALIBRATOR.

DEPENDING ON THE CONFIGURATION OF THE 2100 / 3200 CALIBRATOR THE SECOND LEAD SHOULD BE EITHER :

Set C2
LEAD MARKED FOR 'NORMAL' CONFIGURATION EARTH-EARTH

OR

Set C3
LEAD MARKED FOR 'EARTH-NEUTRAL' (NO TRIP) CONFIGURATION –
NOTE THESE CALIBRATORS WILL BE MARKED AS EARTH-NEUTRAL ON THE REAR PANEL
OPTION LABEL IF CONFIGURED THIS WAY.


Loop Resistance Connections & Calibration

Loop resistance should be measured by passing current through resistor and measuring voltage drop, then calculate the resistance using from ohms law, $V/I=R$.

The 4 terminal resistance measurement is made from the earth of the mains input to the 2100 to the Earth pin of the output socket of the 2100.


NOTE:

The measurement of loop resistance is the difference between 'range 1', zero, and the selected range

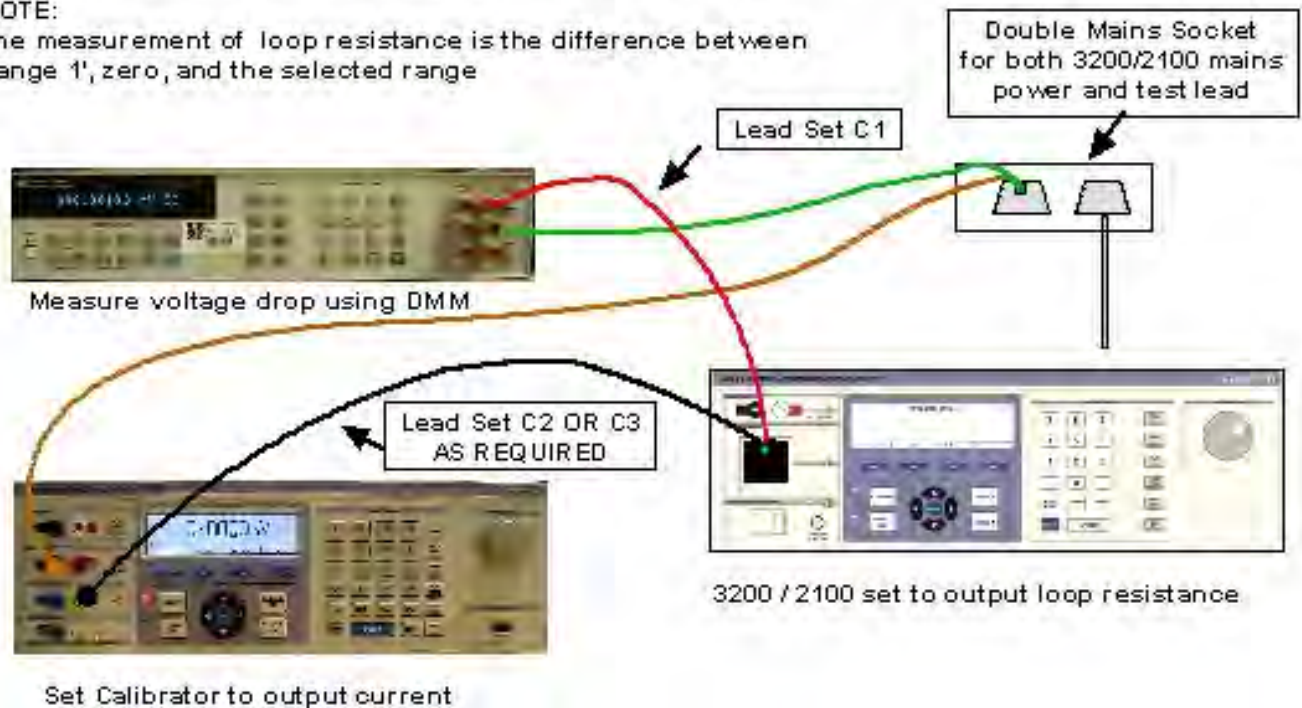

Calibration Method


1. Connect 3200 / 2100 to meter as per diagram using **LEAD SET C**
2. Select LOOP function on 3200 / 2100 and select MANUAL – type in 0.001 then press enter to reset the line impedance compensation to ZERO before calibrating the loop resistance values.
3. Select Loop Resistance mode on 3200 / 2100 CCP
this will set the 3200 / 2100 to **00hms Output** initially

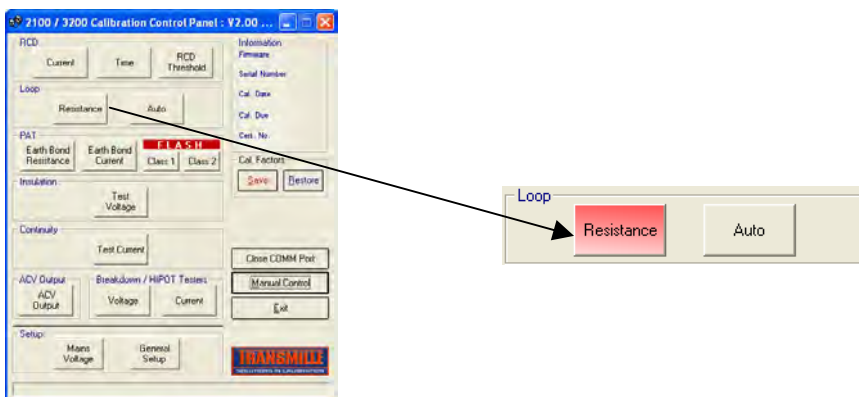

4. Set the current source to the current as specified in the table below and measure **voltage drop**

| Loop Resistance Value | Current Setting |
|-----------------------|-----------------|
| 1 kOhm | 1mA |
| 100 Ohms | 10mA |
| 10 Ohms | 100mA |
| < 5 Ohms | 1A |

5. Calculate resistance value using Ohms Law ($V/I = R$)
6. Enter calculated current resistance into resistance value box on CCP in uOhms and click **SEND**

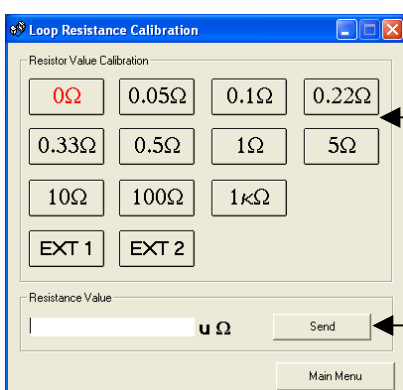

RANGE SELECTION

Select range to be calibrated here

ADJUSTMENT CONTROL

Adjust cal factor using up/down buttons – note using the up/down button automatically sends cal factor to calibrator, the send button is needed only if a cal factor is manually typed into the cal factor value box.

7. Repeat steps 4 to 6 for all resistance values.

Verification Test Points


See Performance Verifications Sheet Page 5

RCD (Residual Current Device) Current Function

| | |
|--|--|
| | VERIFICATION AND CALIBRATION PROCEDURES ARE FOR USE BY QUALIFIED TECHNICIANS ONLY – OBSERVE ALL PRECAUTIONS DURING CONNECTION AND MEASUREMENT OF LINE HIGH VOLTAGES |
|--|--|

| | |
|---------------------------|--------------------------------------|
| Equipment Required | Comments |
| AC Current Source | Capable of sourcing up to 3A AC 50Hz |


Connections

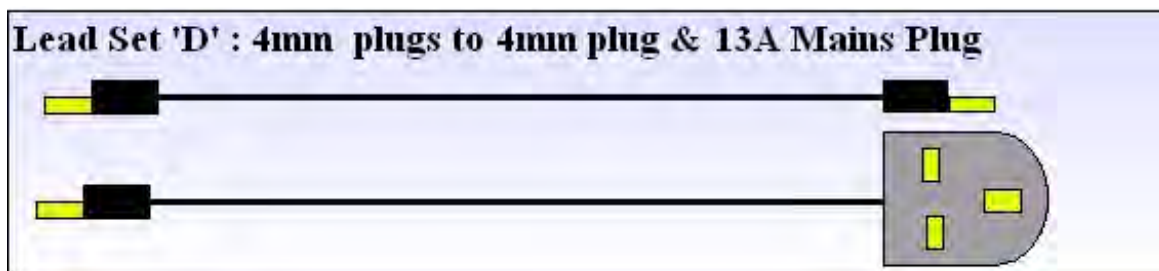

RCD Current Calibration Connections


To Calibrate RCD Current Measurement the 3200 / 2100 must be set to 'Calibration' mode using either Procal or the CCP program. In this mode the 3200 / 2100 will read/display the measured current continuously.

Using Lead set 'D' connect the calibrator to the 2100, as shown below. Select the required RCD current range on the 2100 and inject the Full scale AC 50Hz current from the calibrator.

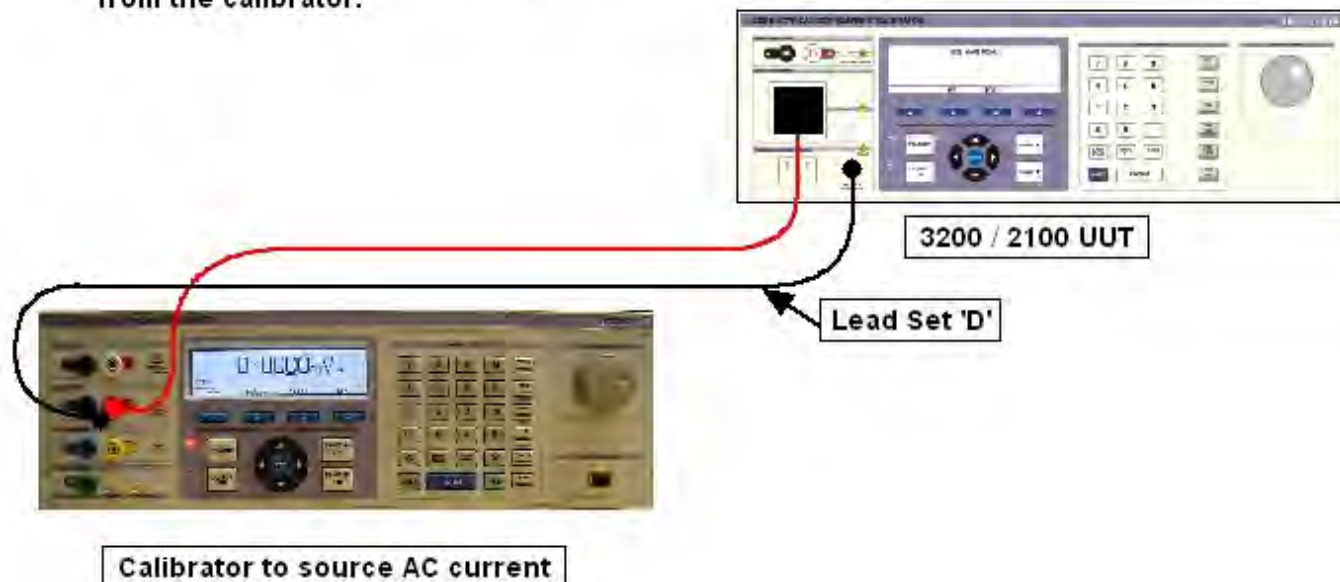


Calibration Method

1. Connect 3200 / 2100 to meter as per diagram using **LEAD SET D**
2. Select RCD Current mode on 3200 / 2100 CCP
this will set the 3200 / 2100 to **10mA Range** in calibration mode (continuous reading)

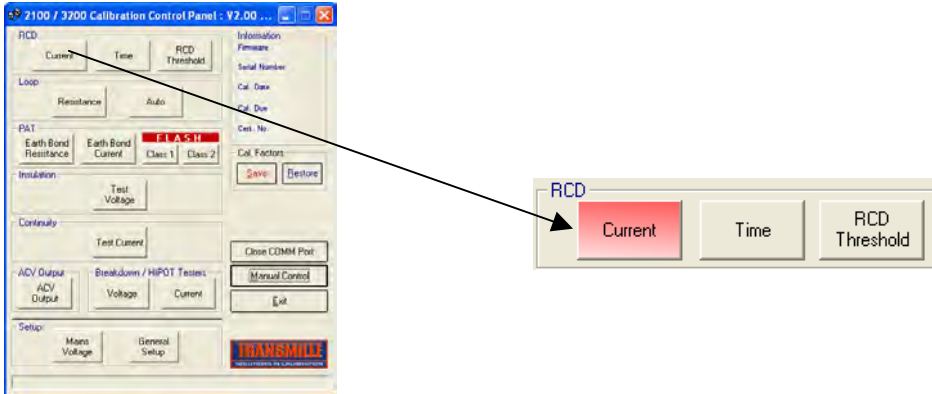

3. Set the current source to the current range full scale
4. Adjust cal factor using CCP software adjustment control

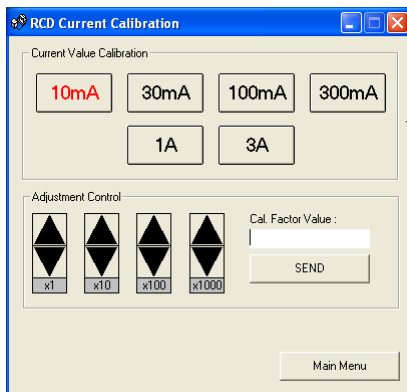

RANGE SELECTION

Select range to be calibrated here

ADJUSTMENT CONTROL

Adjust cal factor using up/down buttons – note using the up/down button automatically sends cal factor to calibrator, the send button is needed only if a cal factor is manually typed into the cal factor value box.

5. Repeat process for each RCD current range

Verification Test Points

See Performance Verifications Sheet Page 6

RCD (Residual Current Device) Trip Time Function




VERIFICATION AND CALIBRATION PROCEDURES ARE FOR USE BY QUALIFIED TECHNICIANS ONLY – OBSERVE ALL PRECAUTIONS DURING CONNECTION AND MEASUREMENT OF LINE HIGH VOLTAGES

| Equipment Required | Comments |
|--------------------------------|-------------------------------|
| Digital Storage Oscilloscope | |
| RCD & oscilloscope Trigger Box | Supplied with calibration kit |

Connections

RCD TIMING MEASUREMENT

Connect up the 3200 / 2100, RCD Trip Adapter and oscilloscope as shown below. The test box will both trigger the oscilloscope and the 3200 / 2100. Select the RCD function on the 3200 / 2100 and select the 10mA Trip Current. Adjust settings on the scope for storage mode and use external trigger input. Select 'Test' on the 3200 / 2100, then switch the RCD Trip box to START. Read timing from the oscilloscope.

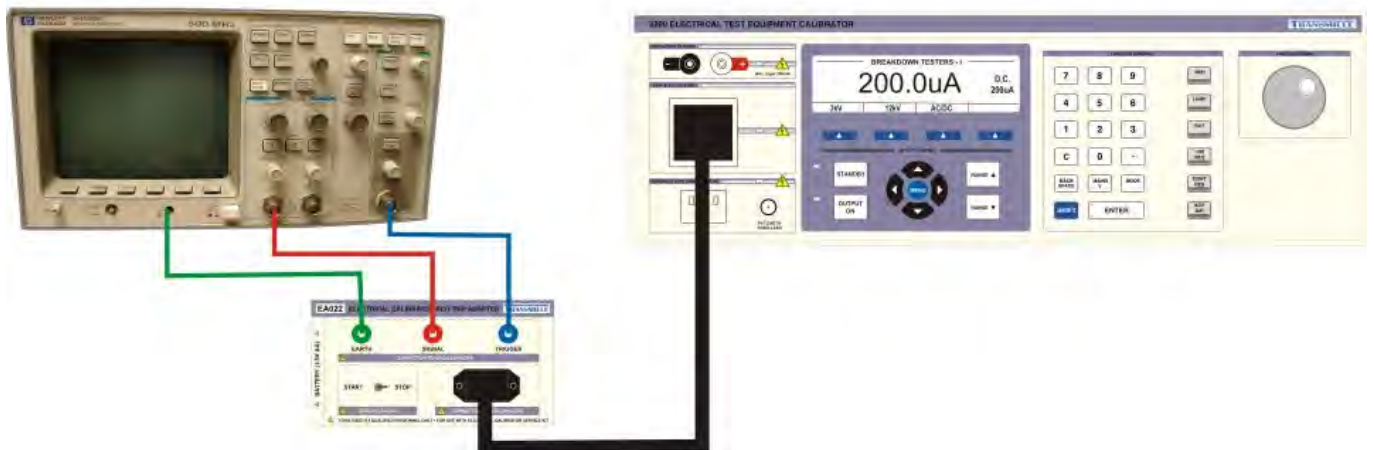

Verification Method

1. Connect 3200 / 2100 to meter as per diagram using **RCD & OSCILLOSCOPE TRIGGER BOX**
2. Select RCD Function on 3200 / 2100 – set 10mA / 40ms trip current / time
3. Adjust setting on oscilloscope for storage mode and to use external trigger input

Set 5V/Div Amplitude, 5ms Timebase.


Select external trigger and single shot storage mode as to view waveform as shown in screenshot below.

Adjust to trigger oscilloscope on a 5V rising edge.

4. Press the **TEST** soft key on the 3200 / 2100 to begin the test

If the button is pressed at the wrong part of the mains cycle an obviously incorrect time period will result. Simply reset the oscilloscope / 3200 / 2100 and press button again to retest.

5. Read the timing from the oscilloscope – target value is 40ms \pm 0.7ms

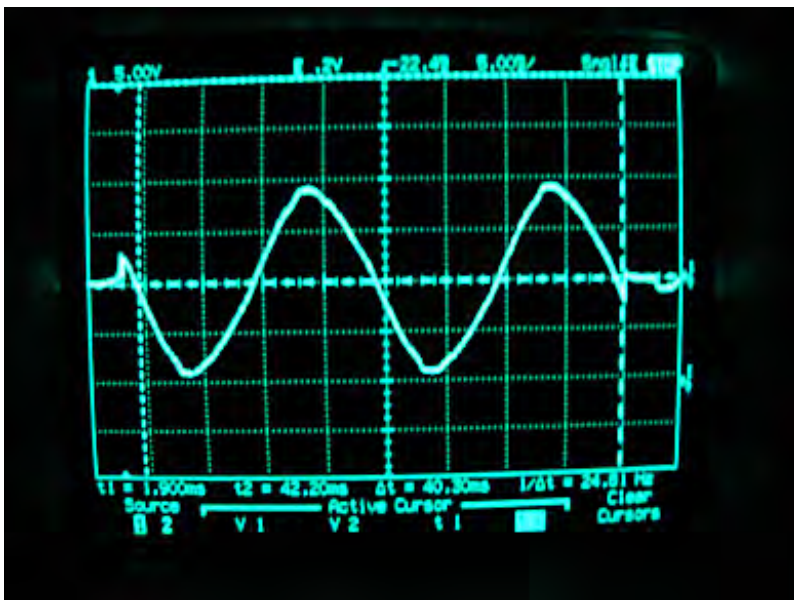

Verification Test Points

See Performance Verification Sheet Page 6


PAT Insulation Resistance Function




VERIFICATION AND CALIBRATION PROCEDURES ARE FOR USE BY QUALIFIED TECHNICIANS ONLY – OBSERVE ALL PRECAUTIONS DURING CONNECTION AND MEASUREMENT OF LINE HIGH VOLTAGES

| Equipment Required | Comments |
|--------------------|----------------------------------|
| Resistance Meter | Capable of measuring up to 1kOhm |

Connections

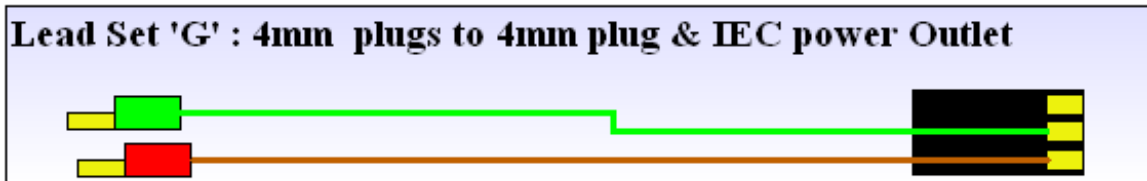

PAT Insulation Lead Connections

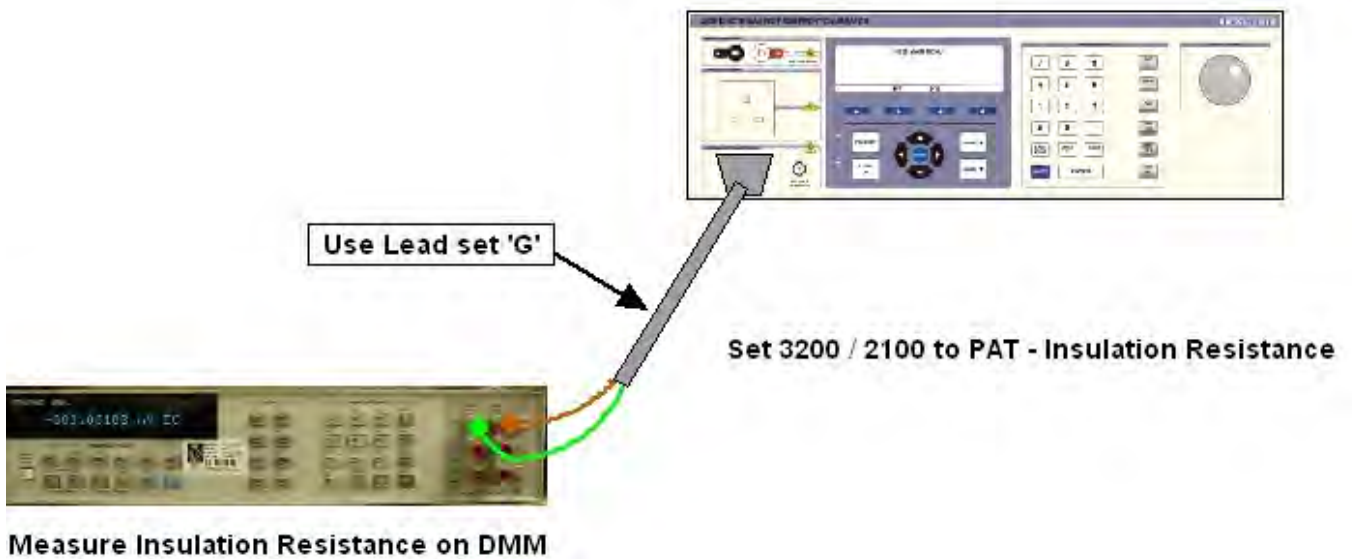

Verification Method

1. Connect 3200 / 2100 to meter as per diagram using **LEAD SET G**
2. Select PAT Insulation Resistance mode and test points as per verification sheet using the 3200 / 2100 front panel and record measurement obtained using 2-wire connection.

Verification Test Points

See Performance Verifications Sheet Page 6


PAT Earth Bond Resistance Function




VERIFICATION AND CALIBRATION PROCEDURES ARE FOR USE BY QUALIFIED TECHNICIANS ONLY – OBSERVE ALL PRECAUTIONS DURING CONNECTION AND MEASUREMENT OF LINE HIGH VOLTAGES

| Equipment Required | Comments |
|--------------------|---------------------------------|
| DC Voltage meter | |
| DC Current Source | Capable of sourcing up to 1A DC |

Connections




Earth bond resistance should be measured by passing a known current through the resistor and measuring the voltage drop. Resistance can be calculated using ohms law, $V/I=R$. The connection must be as shown below, measured using 4 terminals method, (Kelvin) from the earth bond terminal on the front of the 3200 / 2100 to the Earth pin on the end of the calibrated lead supplied

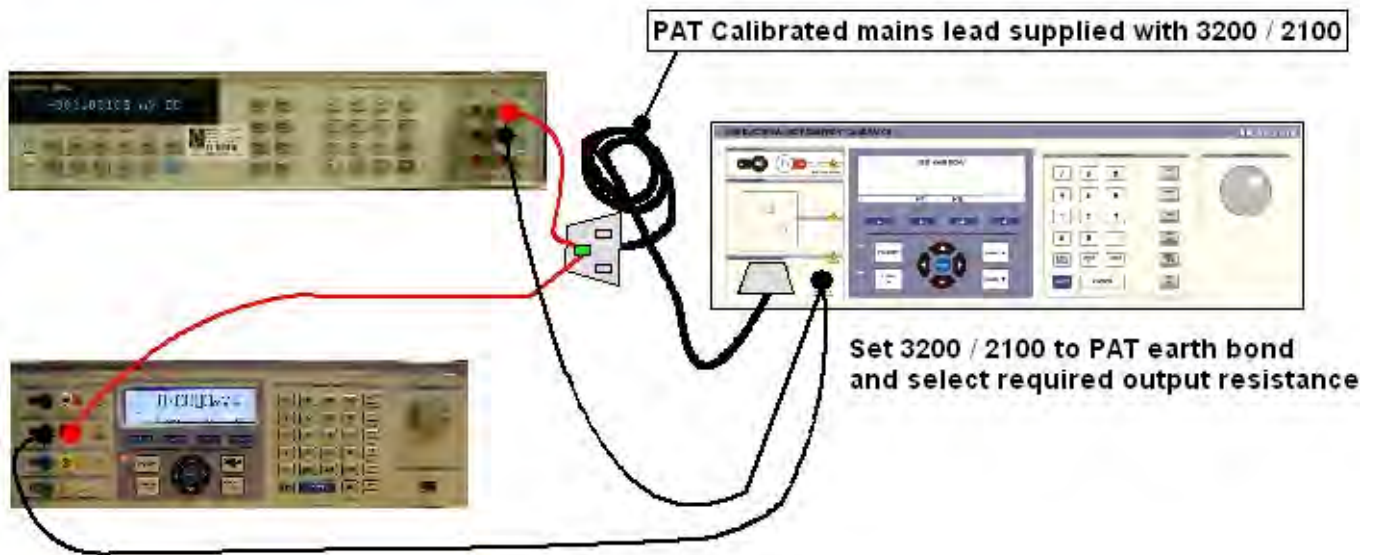

Calibration Method


1. Connect 3200 / 2100 to meter as per diagram using **LEAD SET G**
2. Select PAT Earth Bond Resistance mode on 3200 / 2100 CCP
this will set the 3200 / 2100 to **00hms Output** initially

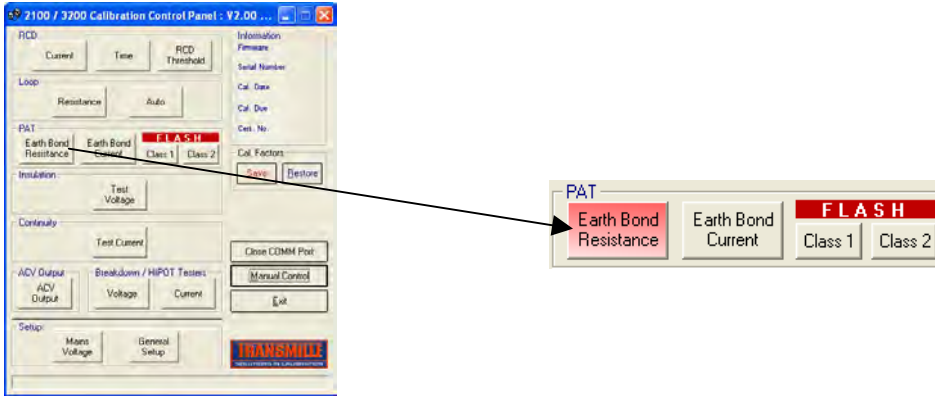

3. Set the current source to the current as specified in the table below and measure **voltage drop**

| Loop Resistance Value | Current Setting |
|-----------------------|-----------------|
| 1 kOhm | 1mA |
| 100 Ohms | 10mA |
| 10 Ohms | 100mA |
| < 5 Ohms | 1A |

4. Calculate resistance value using Ohms Law ($V/I = R$)
5. Enter calculated resistance into resistance value box on CCP in uOhms and click **SEND**

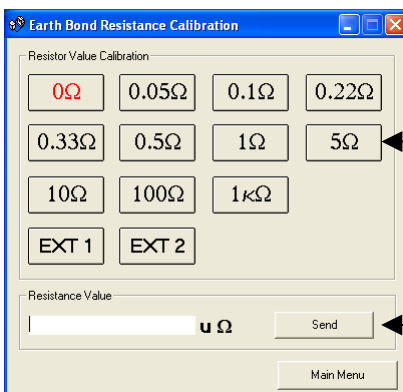

RANGE SELECTION
Select range to be calibrated here

ADJUSTMENT CONTROL
Adjust cal factor using up/down buttons – note using the up/down button automatically sends cal factor to calibrator, the send button is needed only if a cal factor is manually typed into the cal factor value box.

6. Repeat steps 3 to 5 for all resistance values.

Verification Test Points

See Performance Verifications Sheet Page 7



PAT Earth Bond Current Function



VERIFICATION AND CALIBRATION PROCEDURES ARE FOR USE BY QUALIFIED TECHNICIANS ONLY – OBSERVE ALL PRECAUTIONS DURING CONNECTION AND MEASUREMENT OF LINE HIGH VOLTAGES


| Equipment Required | Comments |
|--------------------|----------------------------------|
| DC Current Source | Capable of sourcing up to 20A DC |

Connections

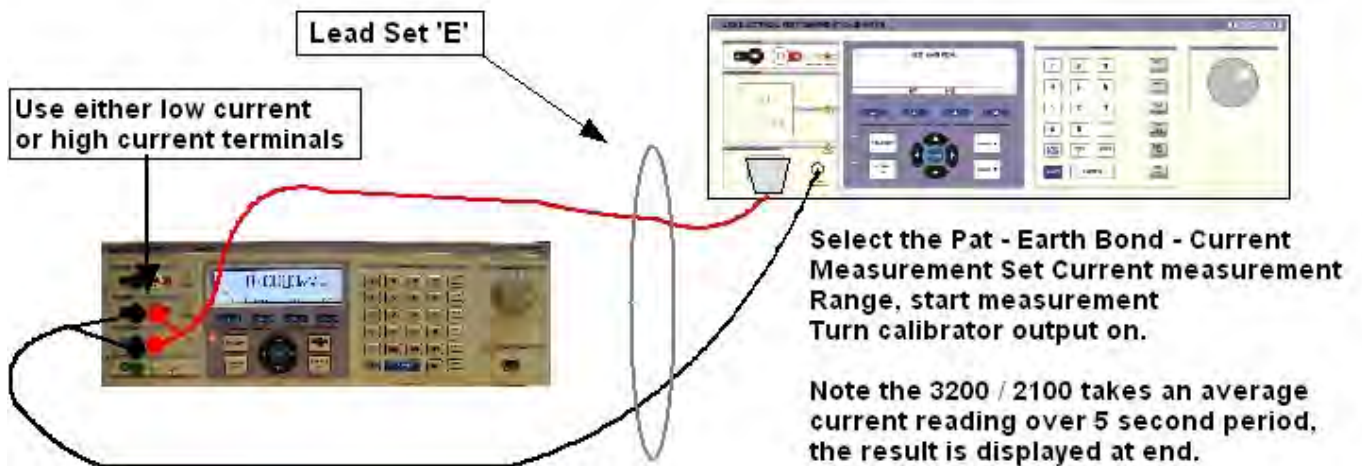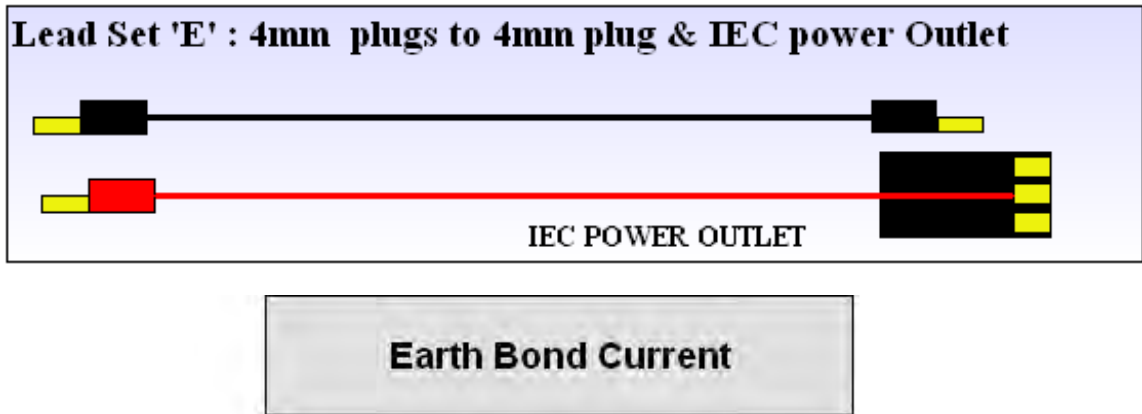


Calibration Method


1. Connect 3200 / 2100 to meter as per diagram using **LEAD SET E**
2. Select PAT Earth Current mode on 3200 / 2100 CCP
this will set the 3200 / 2100 to **100mA Range** initially

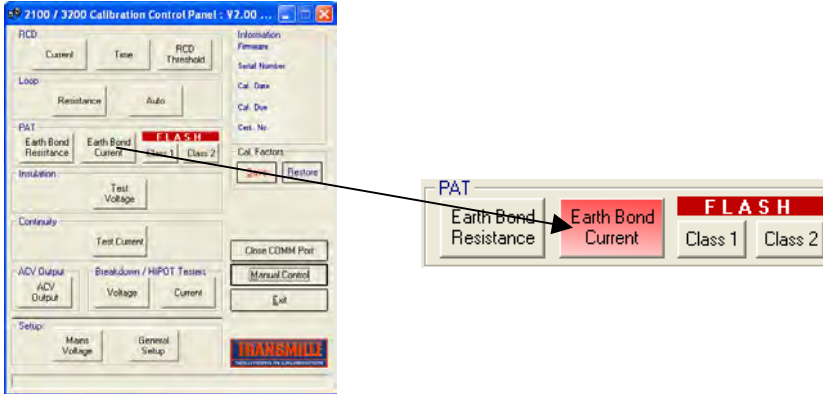


3. Set the current source to the current as specified in the table below :


| Earth Bond current Range | Current Setting |
|--------------------------|-----------------|
| 100mA | 100mA |
| 10A | 10A |
| 30A | 20A |


4. Press the  button on the 3200 / 2100 CCP PAT Earth Bond Current screen to begin the 5s test.

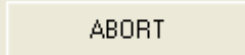Note : To abort the test at any time press 

5. When the test has completed check the measured value displayed by the 3200 / 2100.

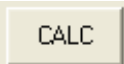If adjustment is required use  the button to automatically calculate the cal factor.

6. Press  to re-run the test to confirm the cal factor is correct

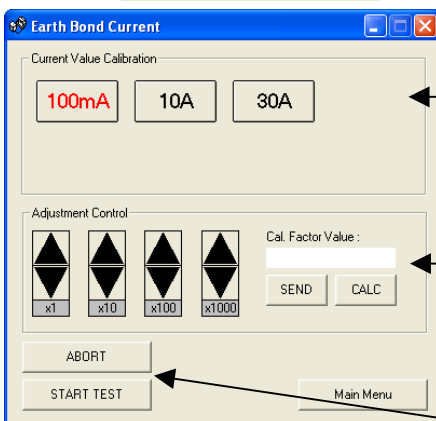

RANGE SELECTION

Select range to be calibrated here

ADJUSTMENT CONTROL

Adjust cal factor using up/down buttons – note using the up/down button automatically sends cal factor to calibrator, the send button is needed only if a cal factor is manually typed into the cal factor value box.

START/ABORT TEST CONTROL

Use these buttons to start or stop the Earth Bond Current test sequence.

7. Repeat steps 3 to 6 for all current ranges.

Verification Test Points

See Performance Verifications Sheet Page 7

PAT Load Function




VERIFICATION AND CALIBRATION PROCEDURES ARE FOR USE BY QUALIFIED TECHNICIANS ONLY – OBSERVE ALL PRECAUTIONS DURING CONNECTION AND MEASUREMENT OF LINE HIGH VOLTAGES

| Equipment Required | Comments |
|--------------------|----------|
| Resistance Meter | |

Connections

Lead Set 'H' : 4mm plugs to 4mm plug & IEC power Outlet

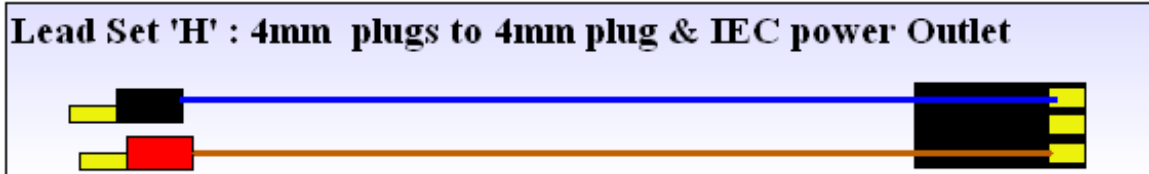

PAT Load Measurements

Lead Set 'H'



Select PAT load function on 3200 / 2100



Measure open circuit, Short circuit and 440 ohm load resistor.

Verification Method


1. Connect 3200 / 2100 to meter as per diagram using **LEAD SET H**
2. Select PAT mode on 3200 / 2100 using front panel
3. Select the **NEXT** button to move to the next menu

| | | | |
|---------------------------------|--------|---------|-------------|
| PAT TESTING | | | |
| CONNECT PAT TO IEC INLET SOCKET | | | |
| BOND RES | BOND I | INS RES | NEXT |

4. Select the **LOAD** function using the soft key on the 3200 / 2100

| | | | |
|---------------------------------|-------|---------|------|
| PAT TESTING | | | |
| CONNECT PAT TO IEC INLET SOCKET | | | |
| LOAD | FLASH | LEAKAGE | BACK |

5. Select **0.13kVA** – reading on meter should be **440kOhms**
6. Select **S/C** (short circuit)
7. Select **O/C** (open circuit)

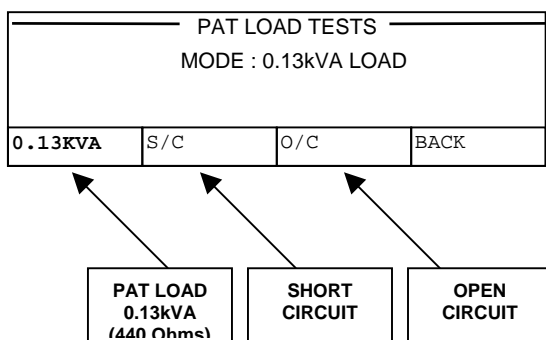

Verification Test Points

See Performance Verifications Sheet Page 7


PAT Leakage Current Function




VERIFICATION AND CALIBRATION PROCEDURES ARE FOR USE BY QUALIFIED TECHNICIANS ONLY – OBSERVE ALL PRECAUTIONS DURING CONNECTION AND MEASUREMENT OF LINE HIGH VOLTAGES

| Equipment Required | Comments |
|--------------------|--------------------------------|
| AC Current Meter | Battery powered meter required |

Connections

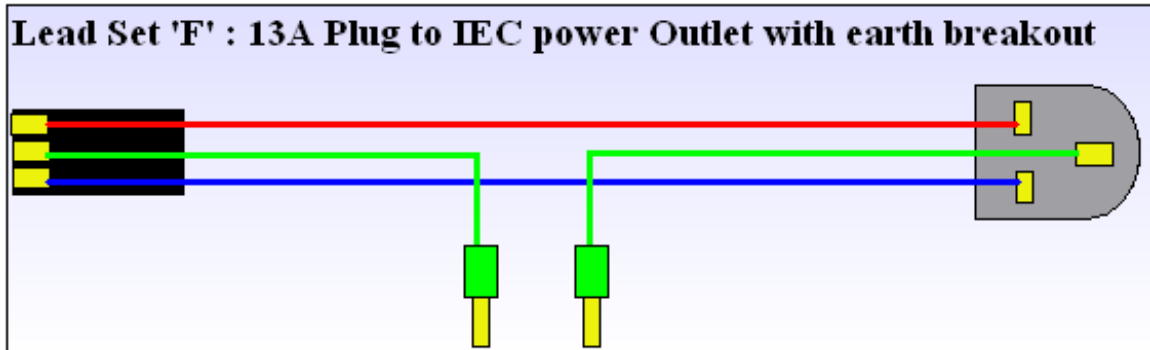


PAT Leakage Current

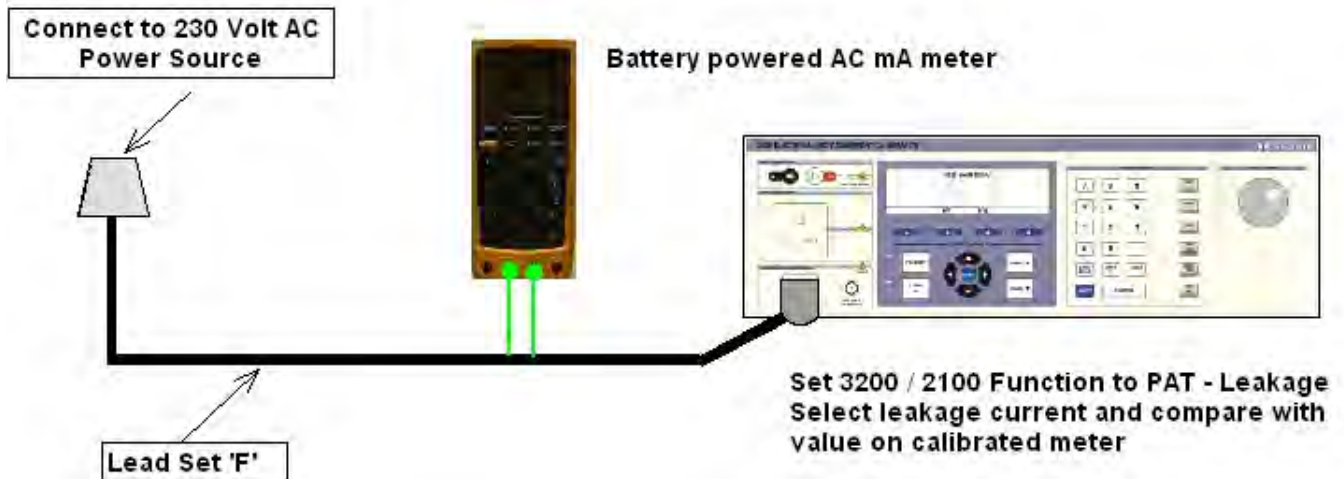


Verification Method


1. Connect 3200 / 2100 to meter as per diagram using **LEAD SET F**
2. Select PAT mode on 3200 / 2100 using front panel
3. Select the **NEXT** button to move to the next menu

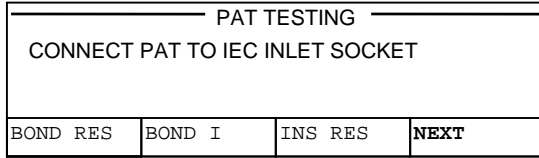

4. Select the **LEAKAGE** using soft key

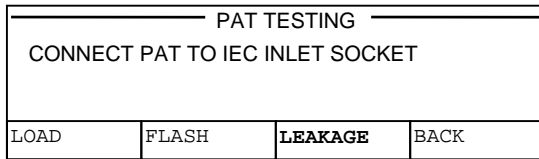

4. Compare current measured on battery powered meter with value displayed on 3200 / 2100 calibrator

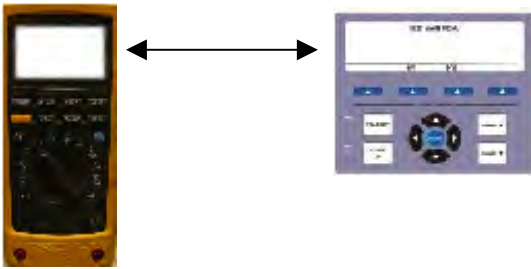

Verification Test Points

See Performance Verifications Sheet Page 8



APPENDIX A



**Transmille 3200A Electrical Test Calibrator
PERFORMANCE VERIFICATION**

SERIAL NUMBER

DATE

12-October-2011

TESTED BY

| No | TITLE | TEST | FREQ | ACCURACY | | | READING | CONNECTIONS / NOTES |
|----|-------|------|------|-----------|------|------|---------|---------------------|
| | | | | % READING | % FS | ZERO | | |

Insulation Resistance

| | | | | | | | | | | |
|----|-------|-------|--|------|---|---|---|-------|--|--|
| 4 | 10kR | 10kR | | 0.1% | - | - | = | 10R | | |
| 5 | 20kR | 20kR | | 0.1% | - | - | = | 20R | | |
| 6 | 30kR | 30kR | | 0.1% | - | - | = | 30R | | |
| 7 | 40kR | 40kR | | 0.1% | - | - | = | 40R | | |
| 8 | 60kR | 60kR | | 0.1% | - | - | = | 60R | | |
| 9 | 100kR | 100kR | | 0.1% | - | - | = | 100R | | |
| 10 | 200kR | 200kR | | 0.1% | - | - | = | 200R | | |
| 11 | 400kR | 400kR | | 0.1% | - | - | = | 400R | | |
| 12 | 600kR | 600kR | | 0.1% | - | - | = | 600R | | |
| 13 | 1MR | 1MR | | 0.1% | - | - | = | 1kR | | |
| 14 | 2MR | 2MR | | 0.1% | - | - | = | 2kR | | |
| 15 | 3MR | 3MR | | 0.1% | - | - | = | 3kR | | |
| 16 | 4MR | 4MR | | 0.1% | - | - | = | 4kR | | |
| 17 | 5MR | 5MR | | 1% | - | - | = | 50kR | | |
| 18 | 6MR | 6MR | | 1% | - | - | = | 60kR | | |
| 19 | 7MR | 7MR | | 1% | - | - | = | 70kR | | |
| 20 | 8MR | 8MR | | 1% | - | - | = | 80kR | | |
| 21 | 9MR | 9MR | | 1% | - | - | = | 90kR | | |
| 22 | 10MR | 10MR | | 1% | - | - | = | 100kR | | |
| 23 | 20MR | 20MR | | 1% | - | - | = | 200kR | | |
| 24 | 30MR | 30MR | | 1% | - | - | = | 300kR | | |
| 25 | 40MR | 40MR | | 1% | - | - | = | 400kR | | |
| 26 | 50MR | 50MR | | 1% | - | - | = | 500kR | | |

Connect to 3200 for Insulation Tests



Transmill 3200A Electrical Test Calibrator
PERFORMANCE VERIFICATION

| No | TITLE | TEST | FREQ | ACCURACY | | | TOTAL | READING | CONNECTIONS / NOTES |
|--|-------|-------|------|-----------|------|------|-------|---------|---------------------------------|
| | | | | % READING | % FS | ZERO | | | |
| 27 | 60MR | | | 1% | - | = | 600kR | | |
| 28 | 70MR | | | 1% | - | = | 700kR | | |
| 29 | 80MR | | | 1% | - | = | 800kR | | |
| 30 | 90MR | | | 1% | - | = | 900kR | | |
| 31 | 100MR | | | 1% | - | = | 1MR | | |
| 32 | 200MR | | | 1% | - | = | 2MR | | |
| 33 | 400MR | | | 1% | - | = | 4MR | | |
| 34 | 600MR | | | 1% | - | = | 6MR | | |
| 35 | 800MR | | | 1% | - | = | 8MR | | |
| 36 | 1GR | | | 1% | - | = | 10MR | | |
| 37 | 2GR# | | | 1% | - | = | 20MR | | |
| 10G Ohm Option | | | | | | | | | |
| 40 | 4GR# | | | 5% | - | = | 200MR | | |
| 41 | 6GR# | | | 5% | - | = | 300MR | | |
| 42 | 8GR# | | | 5% | - | = | 400MR | | |
| 43 | 10GR# | | | 5% | - | = | 500MR | | |
| Continuity Resistance | | | | | | | | | |
| Connection to the 3200 insulation test terminals was made using 4 wire ohms | | | | | | | | | |
| with the system nulled when shorted at the terminals. The readings | | | | | | | | | |
| recorded are the resistance measured at the terminals and include | | | | | | | | | |
| any residual resistance of the 3200. | | | | | | | | | |
| 51 | 20mR | 20mR | | 0.25% | - | 25mR | = | 25.1mR | Connect in 4-wire configuration |
| 53 | 200mR | 200mR | | 0.25% | - | 25mR | = | 25.5mR | Continuity 0.2R - 1kR |
| 54 | 210mR | 210mR | | 0.25% | - | 25mR | = | 25.5mR | |
| 55 | 220mR | 220mR | | 0.25% | - | 25mR | = | 25.6mR | |



Transmillie 3200A Electrical Test Calibrator
PERFORMANCE VERIFICATION

| No | TITLE | TEST | FREQ | % READING | ACCURACY | | | CONNECTIONS / NOTES |
|---------------------------|-------|-------|------|-----------|----------|------|----------|---------------------|
| | | | | | % FS | ZERO | TOTAL | |
| 56 | 230mR | 230mR | | 0.25% | - | 25mR | = 25.6mR | |
| 57 | 240mR | 240mR | | 0.25% | - | 25mR | = 25.6mR | |
| 58 | 250mR | 250mR | | 0.25% | - | 25mR | = 25.6mR | |
| 59 | 260mR | 260mR | | 0.25% | - | 25mR | = 25.7mR | |
| 60 | 270mR | 270mR | | 0.25% | - | 25mR | = 25.7mR | |
| 61 | 280mR | 280mR | | 0.25% | - | 25mR | = 25.7mR | |
| 62 | 290mR | 290mR | | 0.25% | - | 25mR | = 25.7mR | |
| 63 | 300mR | 300mR | | 0.25% | - | 25mR | = 25.8mR | |
| 64 | 400mR | 400mR | | 0.25% | - | 25mR | = 26mR | |
| 65 | 500mR | 500mR | | 0.25% | - | 25mR | = 26.3mR | |
| 66 | 600mR | 600mR | | 0.25% | - | 25mR | = 26.5mR | |
| 67 | 700mR | 700mR | | 0.25% | - | 25mR | = 26.8mR | |
| 68 | 800mR | 800mR | | 0.25% | - | 25mR | = 27mR | |
| 69 | 900mR | 900mR | | 0.25% | - | 25mR | = 27.3mR | |
| 70 | 1R | 1R | | 0.25% | - | 25mR | = 27.5mR | |
| 71 | 2R | 2R | | 0.25% | - | 25mR | = 30mR | |
| 72 | 4R | 4R | | 0.25% | - | 25mR | = 35mR | |
| 73 | 6R | 6R | | 0.25% | - | 25mR | = 40mR | |
| 74 | 8R | 8R | | 0.25% | - | 25mR | = 45mR | |
| 75 | 10R | 10R | | 0.25% | - | 25mR | = 50mR | |
| 76 | 20R | 20R | | 0.25% | - | 25mR | = 75mR | |
| 77 | 100R | 100R | | 0.25% | - | 25mR | = 275mR | |
| 78 | 1kR | 1kR | | 0.25% | - | 25mR | = 2.5R | |
| Continuity Current | | | | | | | | |
| 84 | 50mA | 50mA | | 1.3% | - | - | = 1.3mA | |
| 85 | 100mA | 100mA | | 1.3% | - | - | = 1.9mA | |
| 86 | 200mA | 200mA | | 1.3% | - | - | = 3.2mA | |



Transmillie 3200A Electrical Test Calibrator
PERFORMANCE VERIFICATION

| No | TITLE | TEST | FREQ | ACCURACY | | | READING | CONNECTIONS / NOTES |
|--|----------------------|---------|------|-----------|------|------|---------|---|
| | | | | % READING | % FS | ZERO | | |
| | | | | TOTAL | | | | |
| 87 | 300mA | 300mA | | 1.3% | - | - | 4.5mA | |
| AC Voltage Output | | | | | | | | |
| 96 | 100 Volts Nom @ 50Hz | 100V | | 0.2% | - | - | 200mV | Measure 100V A.C. O/P from 3200 with DMM |
| 97 | 200 Volts Nom @ 50Hz | 200V | | 0.2% | - | - | 400mV | Measure 200V A.C. O/P from 3200 with DMM |
| 98 | Line Volts @ 50Hz | 240V | | 0.2% | - | - | 480mV | Measure 240V A.C. O/P from 3200 with DMM |
| 99 | 300 Volts Nom @ 50Hz | 300V | | 0.2% | - | - | 600mV | Measure 300V A.C. O/P from 3200 with DMM |
| 100 | 400 Volts Nom @ 50Hz | 400V | | 0.2% | - | - | 800mV | Measure 400V A.C. O/P from 3200 with DMM |
| Insulation Resistance Voltage Measurement | | | | | | | | |
| Insulation Resistance Voltage Measurement -16th Edition | | | | | | | | |
| 110 | 50V | 50V | | 1% | - | - | 1.3V | Connect calibrator to 3200 insulation terminals |
| 111 | 100V | 100V | | 1% | - | - | 1.8V | Connect calibrator to 3200 insulation terminals |
| 112 | 250V | 150V | | 1% | - | - | 2.3V | Connect calibrator to 3200 insulation terminals |
| 113 | 250V | 200V | | 1% | - | - | 2.8V | Connect calibrator to 3200 insulation terminals |
| 114 | 250V | 250V | | 1% | - | - | 3.3V | Connect calibrator to 3200 insulation terminals |
| 115 | 500V | 500V | | 1% | - | - | 5.8V | Connect calibrator to 3200 insulation terminals |
| 116 | 1000V | 1000V | | 1% | - | - | 10.8V | Connect calibrator to 3200 insulation terminals |
| Insulation Resistance Current Measurement -16th Edition 500V / 1000V Ranges | | | | | | | | |
| 119 | 1.0mA @ 500V | 1.000mA | | 1% | - | - | 18uA | Connect calibrator to 3200 insulation terminals use current meter |
| 120 | 1.0mA @ 1000V | 1.000mA | | 1% | - | - | 18uA | Connect calibrator to 3200 insulation terminals use current meter |
| Insulation Resistance Voltage Measurement -17th Edition | | | | | | | | |
| 123 | 50V | 50V | | 1% | - | - | 1.3V | Connect calibrator to 3200 insulation terminals |
| 124 | 100V | 100V | | 1% | - | - | 1.8V | Connect calibrator to 3200 insulation terminals |
| 125 | 250V | 150V | | 1% | - | - | 2.3V | Connect calibrator to 3200 insulation terminals |
| 126 | 250V | 200V | | 1% | - | - | 2.8V | Connect calibrator to 3200 insulation terminals |
| 127 | 250V | 250V | | 1% | - | - | 3.3V | Connect calibrator to 3200 insulation terminals |



**Transmillie 3200A Electrical Test Calibrator
PERFORMANCE VERIFICATION**

| No | TITLE | TEST | FREQ | ACCURACY | | | READING | CONNECTIONS / NOTES |
|--|---------------|---------|------|-----------|------|-------|---------|---|
| | | | | % READING | % FS | ZERO | | |
| | | | | TOTAL = | | | | |
| 128 | 500V | 500V | | 1% | - | - | 5.8V | Connect calibrator to 3200 insulation terminals |
| 129 | 1000V | 1000V | | 1% | - | - | 10.8V | Connect calibrator to 3200 insulation terminals |
| Insulation Resistance Current Measurement -17th Edition 500V / 1000V Range | | | | | | | | |
| 132 | 0.5mA @ 500V | 0.500mA | | 1% | - | - | 13uA | Connect calibrator to 3200 insulation terminals use current meter |
| 133 | 1.0mA @ 1000V | 1.000mA | | 1% | - | - | 18uA | Connect calibrator to 3200 insulation terminals use current meter |
| Loop Resistance | | | | | | | | |
| Loop impedance was measured using 4 wire ohms connections | | | | | | | | |
| between the earth pin of the 3200 loop test socket and the earth pin of the | | | | | | | | |
| 3200 mains supply lead. The supply loop impedance was manually entered as | | | | | | | | |
| zero and the measurement system was nulled. The recorded readings are the | | | | | | | | |
| differences recorded from the zero value. | | | | | | | | |
| 158 | Loop Res. | 0.05R | | 0.5% | - | 4mR | = 4.3mR | Use High Current Terminals - 0.05R |
| 159 | Loop Res. | 0.1R | | 0.5% | - | 4mR | = 4.5mR | Use High Current Terminals - 0.1R |
| 160 | Loop Res. | 0.22R | | 0.5% | - | 4mR | = 5.1mR | Use High Current Terminals - 0.22R |
| 161 | Loop Res. | 0.33R | | 0.5% | - | 4mR | = 5.7mR | Use High Current Terminals - 0.33R |
| 162 | Loop Res. | 0.50R | | 0.5% | - | 4mR | = 6.5mR | Use High Current Terminals - 0.50R |
| 164 | Loop Res. | 1R | | 0.5% | - | 4mR | = 9mR | Use Low Current Terminals - 1R |
| 166 | Loop Res. | 5R | | 0.5% | - | 4mR | = 29mR | Use Low Current Terminals - 5R |
| 167 | Loop Res. | 10R | | 0.5% | - | 4mR | = 54mR | Use Low Current Terminals - 10R |
| 169 | Loop Res. | 100R | | 0.5% | - | 4mR | = 504mR | Use Low Current Terminals - 100R |
| 171 | Loop Res. | 1000R | | 0.5% | - | 4mR | = 5R | Use Low Current Terminals - 1000R |
| RCD Current | | | | | | | | |
| 183 | 10mA @ 50Hz | 10mA | 50 | 1% | - | 0.1mA | = 200uA | Connect 2100 to calibrator using RCD lead (custom test lead) |
| 184 | 30mA @ 50Hz | 30mA | 50 | 1% | - | 0.1mA | = 400uA | |



**Transmill 3200A Electrical Test Calibrator
PERFORMANCE VERIFICATION**

| No | TITLE | TEST | FREQ | ACCURACY | | | READING | CONNECTIONS / NOTES |
|--|---------------------|--------|------|-----------|------|--------------|----------|---------------------|
| | | | | % READING | % FS | ZERO = TOTAL | | |
| 185 | 100mA @ 50Hz | 90mA | 50 | 1% | - | 0.1mA | = 1000uA | |
| 186 | 100mA @ 50Hz | 100mA | 50 | 1% | - | 0.1mA | = 1.1mA | |
| 187 | 100mA @ 50Hz | 110mA | 50 | 1% | - | 0.1mA | = 1.2mA | |
| 188 | 300mA @ 50Hz | 300mA | 50 | 1% | - | 1mA | = 4mA | |
| 189 | 1000mA @ 50Hz | 1000mA | 50 | 1% | - | 1mA | = 11mA | |
| 190 | 2000mA @ 50Hz | 2000mA | 50 | 1% | - | 1mA | = 21mA | |
| RCD Trip current | | | | | | | | |
| 195 | 150mA @ 300mA Range | 150mA | 50 | 1% | - | 1mA | = 2.5mA | |
| RCD Trip time | | | | | | | | |
| 198 | 20ms | 20ms | | - | - | 0.7ms | = 700us | |
| 199 | 40ms | 40ms | | - | - | 0.7ms | = 700us | |
| 200 | 200ms | 200ms | | - | - | 0.7ms | = 700us | |
| 201 | 390ms | 390ms | | - | - | 0.7ms | = 700us | |
| 202 | 900ms | 900ms | | - | - | 0.7ms | = 700us | |
| PAT : Insulation Resistance | | | | | | | | |
| The PAT Insulation Resistance is produced from the same decade resistance arm | | | | | | | | |
| as used for the Insulation Resistance output. The following Tests are only to | | | | | | | | |
| confirm the operation of the output switching. For the Full range of values, | | | | | | | | |
| use the Insulation measurements on this certificate. | | | | | | | | |
| 209 | 1MR | 1MR | | 0.1% | - | - | = 1kR | |
| 210 | 2MR | 2MR | | 0.1% | - | - | = 2kR | |
| 211 | 4MR | 4MR | | 0.1% | - | - | = 4kR | |
| 212 | 6MR | 6MR | | 1% | - | - | = 60kR | |
| 213 | 8MR | 8MR | | 1% | - | - | = 80kR | |
| 214 | 10MR | 10MR | | 1% | - | - | = 100kR | |



Transmillie 3200A Electrical Test Calibrator
PERFORMANCE VERIFICATION

| No | TITLE | TEST | FREQ | % READING | ACCURACY | | | READING | CONNECTIONS / NOTES |
|----|-------|------|------|-----------|----------|------|-------|---------|---------------------|
| | | | | | % FS | ZERO | TOTAL | | |

PAT : Earth Bond Resistance

The resistances recorded include the resistance of the

PAT test mains lead (approx 25milliohms)

| | | | | | | | | | |
|-----|---------------------|-------|------|---|-------|---|--------|--|---|
| 219 | PAT Lead No | 1000a | - | - | 10000 | = | 10000a | | Loop Lead No: <Q> |
| 220 | PAT Lead Resistance | 25mR | 100% | - | - | = | 25mR | | PAT Lead Resistance: <Q> |
| 233 | Bond Res. | 0.00R | 0.5% | - | 4mR | = | 4mR | | Connect using Earth bond lead to meter negs (connect both meter pos to PAT GND) |
| 234 | Bond Res. | 0.05R | 0.5% | - | 4mR | = | 4.3mR | | 0.05R nominal resistor |
| 235 | Bond Res. | 0.1R | 0.5% | - | 4mR | = | 4.5mR | | 0.1R nominal resistor |
| 236 | Bond Res. | 0.22R | 0.5% | - | 4mR | = | 5.1mR | | 0.22R nominal resistor |
| 237 | Bond Res. | 0.33R | 0.5% | - | 4mR | = | 5.7mR | | 0.33R nominal resistor |
| 238 | Bond Res. | 0.5R | 0.5% | - | 4mR | = | 6.5mR | | 0.5R nominal resistor |
| 239 | Bond Res. | 1R | 0.5% | - | 4mR | = | 9mR | | 1R nominal resistor low current terminals |
| 240 | Bond Res. | 5R | 0.5% | - | 4mR | = | 29mR | | 5R nominal resistor low current terminals |
| 241 | Bond Res. | 10R | 0.5% | - | 4mR | = | 54mR | | 10R nominal resistor low current terminals |
| 242 | Bond Res. | 100R | 0.5% | - | 4mR | = | 504mR | | 100R nominal resistor low current terminals |
| 243 | Bond Res. | 1000R | 0.5% | - | 4mR | = | 5R | | 1000R nominal resistor low current terminals (A.C. @ 53Hz) |

PAT : Earth Bond Current

| | | | | | | | | | |
|-----|------------------|-------|----|------|---|---|-------|--|---|
| 252 | 500mA Rng @ 50Hz | 100mA | 50 | 1.5% | - | = | 7.5mA | | Connect to Calibrator 2A (Use Thick Test Leads between PAT Earth & PAT GND) |
| 253 | 500mA Rng @ 50Hz | 200mA | 50 | 1.5% | - | = | 9mA | | Connect to Calibrator 2A (Use Thick Test Leads between PAT Earth & PAT GND) |
| 254 | 500mA Rng @ 50Hz | 400mA | 50 | 1.5% | - | = | 12mA | | Connect to Calibrator 2A (Use Thick Test Leads between PAT Earth & PAT GND) |
| 255 | 10A Rng @ 50Hz | 4A | 50 | 1.5% | - | = | 120mA | | CONNECT TO CALIBRATOR 20 AMP TERMINALS |
| 256 | 10A Rng @ 50Hz | 8A | 50 | 1.5% | - | = | 180mA | | CONNECT TO CALIBRATOR 20 AMP TERMINALS |
| 257 | 10A Rng @ 50Hz | 10A | 50 | 1.5% | - | = | 210mA | | CONNECT TO CALIBRATOR 20 AMP TERMINALS |
| 258 | 30A Rng @ 50Hz | 20A | 50 | 1.5% | - | = | 360mA | | CONNECT TO CALIBRATOR 30 AMP TERMINALS |

PAT: LOAD TESTS



**Transmille 3200A Electrical Test Calibrator
PERFORMANCE VERIFICATION**

| No | TITLE | TEST | FREQ | ACCURACY | | | READING | CONNECTIONS / NOTES |
|----------------------------------|----------------|-------|------|-----------|-------|-------|---------|------------------------------|
| | | | | % READING | % FS | ZERO | | |
| | | | | TOTAL | = | TOTAL | | |
| 261 | S/C TEST | OR | - | - | 0.50R | = | 500mR | |
| 262 | O/C TEST | PASS | - | - | - | = | | IS O/C AT O/C |
| 263 | 0.13kVA TEST | 440R | 5% | - | - | = | 22R | |
| PAT: LEAKAGE CURRENT TEST | | | | | | | | |
| 266 | Leakage @ 240V | 2.0mA | 1.5% | - | - | = | 32uA | Use Variac and current meter |
| 267 | Leakage @ 240V | 4.7mA | 1.5% | - | - | = | 72.5uA | Use Variac and current meter |
| 268 | Leakage @ 240V | 7.7mA | 1.5% | - | - | = | 117.5uA | Use Variac and current meter |
| End of results | | | | | | | | |



Transmille 2100H Electrical Test Calibrator
PERFORMANCE VERIFICATION

SERIAL NUMBER

DATE

TESTED BY

| TITLE | TEST | % | ACCURACY | | TOTAL | READING | CONNECTIONS / NOTES |
|-------|------|---|----------|------|-------|---------|---------------------|
| | | | % FS | ZERO | | | |

Insulation Resistance

| | | | | | | | | |
|-------|-------|------|---|---|---|-------|--|--------------------------------------|
| 10kR | 10kR | 0.1% | - | - | = | 10R | | Connect to 2100 for Insulation Tests |
| 20kR | 20kR | 0.1% | - | - | = | 20R | | |
| 30kR | 30kR | 0.1% | - | - | = | 30R | | |
| 40kR | 40kR | 0.1% | - | - | = | 40R | | |
| 60kR | 60kR | 0.1% | - | - | = | 60R | | |
| 100kR | 100kR | 0.1% | - | - | = | 100R | | |
| 200kR | 200kR | 0.1% | - | - | = | 200R | | |
| 400kR | 400kR | 0.1% | - | - | = | 400R | | |
| 600kR | 600kR | 0.1% | - | - | = | 600R | | |
| 1MR | 1MR | 0.1% | - | - | = | 1kR | | |
| 2MR | 2MR | 0.1% | - | - | = | 2kR | | |
| 3MR | 3MR | 0.1% | - | - | = | 3kR | | |
| 4MR | 4MR | 0.1% | - | - | = | 4kR | | |
| 5MR | 5MR | 1% | - | - | = | 50kR | | |
| 6MR | 6MR | 1% | - | - | = | 60kR | | |
| 7MR | 7MR | 1% | - | - | = | 70kR | | |
| 8MR | 8MR | 1% | - | - | = | 80kR | | |
| 9MR | 9MR | 1% | - | - | = | 90kR | | |
| 10MR | 10MR | 1% | - | - | = | 100kR | | |
| 20MR | 20MR | 1% | - | - | = | 200kR | | |
| 30MR | 30MR | 1% | - | - | = | 300kR | | |
| 40MR | 40MR | 1% | - | - | = | 400kR | | |
| 50MR | 50MR | 1% | - | - | = | 500kR | | |



Transmillie 2100H Electrical Test Calibrator
PERFORMANCE VERIFICATION

| TITLE | TEST | ACCURACY | | | TOTAL | READING | CONNECTIONS / NOTES |
|---|-------|----------|------|------|----------|----------------|---------------------|
| | | % | % FS | ZERO | | | |
| 60MR | 60MR | 1% | - | = | 600kR | | |
| 70MR | 70MR | 1% | - | = | 700kR | | |
| 80MR | 80MR | 1% | - | = | 800kR | | |
| 90MR | 90MR | 1% | - | = | 900kR | | |
| 100MR | 100MR | 1% | - | = | 1MR | | |
| 200MR | 200MR | 1% | - | = | 2MR | | |
| 400MR | 400MR | 1% | - | = | 4MR | | |
| 600MR | 600MR | 1% | - | = | 6MR | | |
| 800MR | 800MR | 1% | - | = | 8MR | | |
| 1GR | 1GR | 1% | - | = | 10MR | | |
| 2GR# | 2GR | 3% | - | = | 60MR | | |
| 4GR# | 4GR | 5% | - | = | 200MR | | |
| 6GR# | 6GR | 5% | - | = | 300MR | | |
| 8GR# | 8GR | 5% | - | = | 400MR | | |
| 10GR# | 10GR | 5% | - | = | 500MR | | |
| Continuity Resistance | | | | | | | |
| Connection to the 2100 insulation test terminals was made using 4 wire ohms | | | | | | | |
| with the system nulled when shorted at the terminals. The readings | | | | | | | |
| recorded are the resistance measured at the terminals and include | | | | | | | |
| any residual resistance of the 2100. | | | | | | | |
| 20mR | 20mR | 0.25% | - | 25mR | = 25.1mR | CONNECT 4-WIRE | |
| 100mR | 100mR | 0.25% | - | 25mR | = 25.3mR | | |
| 110mR | 110mR | 0.25% | - | 25mR | = 25.3mR | | |
| 120mR | 120mR | 0.25% | - | 25mR | = 25.3mR | | |



Transmille 2100H Electrical Test Calibrator
PERFORMANCE VERIFICATION

| TITLE | TEST | ACCURACY | | | TOTAL | READING | CONNECTIONS / NOTES |
|-------|-------|----------|------|------|----------|---------|---------------------|
| | | % | % FS | ZERO | | | |
| 130mR | 130mR | 0.25% | - | 25mR | = 25.3mR | | |
| 140mR | 140mR | 0.25% | - | 25mR | = 25.4mR | | |
| 150mR | 150mR | 0.25% | - | 25mR | = 25.4mR | | |
| 160mR | 160mR | 0.25% | - | 25mR | = 25.4mR | | |
| 170mR | 170mR | 0.25% | - | 25mR | = 25.4mR | | |
| 180mR | 180mR | 0.25% | - | 25mR | = 25.5mR | | |
| 190mR | 190mR | 0.25% | - | 25mR | = 25.5mR | | |
| 200mR | 200mR | 0.25% | - | 25mR | = 25.5mR | | |
| 210mR | 210mR | 0.25% | - | 25mR | = 25.5mR | | |
| 220mR | 220mR | 0.25% | - | 25mR | = 25.6mR | | |
| 230mR | 230mR | 0.25% | - | 25mR | = 25.6mR | | |
| 240mR | 240mR | 0.25% | - | 25mR | = 25.6mR | | |
| 250mR | 250mR | 0.25% | - | 25mR | = 25.6mR | | |
| 260mR | 260mR | 0.25% | - | 25mR | = 25.7mR | | |
| 270mR | 270mR | 0.25% | - | 25mR | = 25.7mR | | |
| 280mR | 280mR | 0.25% | - | 25mR | = 25.7mR | | |
| 290mR | 290mR | 0.25% | - | 25mR | = 25.7mR | | |
| 300mR | 300mR | 0.25% | - | 25mR | = 25.8mR | | |
| 400mR | 400mR | 0.25% | - | 25mR | = 26mR | | |
| 500mR | 500mR | 0.25% | - | 25mR | = 26.3mR | | |
| 600mR | 600mR | 0.25% | - | 25mR | = 26.5mR | | |
| 700mR | 700mR | 0.25% | - | 25mR | = 26.8mR | | |
| 800mR | 800mR | 0.25% | - | 25mR | = 27mR | | |
| 900mR | 900mR | 0.25% | - | 25mR | = 27.3mR | | |
| 1R | 1R | 0.25% | - | 25mR | = 27.5mR | | |
| 2R | 2R | 0.25% | - | 25mR | = 30mR | | |
| 4R | 4R | 0.25% | - | 25mR | = 35mR | | |



Transmille 2100H Electrical Test Calibrator
PERFORMANCE VERIFICATION

| TITLE | TEST | ACCURACY | | | READING | CONNECTIONS / NOTES |
|---|-------|----------|------|------|---------|---|
| | | % | % FS | ZERO | | |
| | | = TOTAL | | | | |
| 6R | 6R | 0.25% | - | 25mR | = 40mR | |
| 8R | 8R | 0.25% | - | 25mR | = 45mR | |
| 10R | 10R | 0.25% | - | 25mR | = 50mR | |
| 20R | 20R | 0.25% | - | 25mR | = 75mR | |
| 100R | 100R | 0.25% | - | 25mR | = 275mR | |
| 1kR | 1kR | 0.25% | - | 25mR | = 2.5R | |
| Continuity Current | | | | | | |
| 100mA | 100mA | 1.3% | - | - | = 1.9mA | |
| 200mA | 200mA | 1.3% | - | - | = 3.2mA | |
| 300mA | 300mA | 1.3% | - | - | = 4.5mA | |
| AC Voltage Output | | | | | | |
| 100 Volts Nom @ 50Hz | 100V | 0.2% | - | - | = 200mV | WARNING HIGH VOLTAGE!! - Measure 100V AC O/P from 2100 with DMM |
| 200 Volts Nom @ 50Hz | 200V | 0.2% | - | - | = 400mV | WARNING HIGH VOLTAGE!! - Measure 200V AC O/P from 2100 with DM |
| Line Volts @ 50Hz | 240V | 0.2% | - | - | = 480mV | WARNING HIGH VOLTAGE!! - Measure 240V AC O/P from 2100 with DM |
| 300 Volts Nom @ 50Hz | 300V | 0.2% | - | - | = 600mV | WARNING HIGH VOLTAGE!! - Measure 300V AC O/P from 2100 with DM |
| 400 Volts Nom @ 50Hz | 400V | 0.2% | - | - | = 800mV | WARNING HIGH VOLTAGE!! - Measure 100V AC O/P from 2100 with DM |
| Insulation Resistance Voltage Measurement | | | | | | |
| 50V | 50V | 1% | - | - | = 1.3V | CONNECT CALIBRATOR TO 2100 INS RES TERMINALS |
| 100V | 100V | 1% | - | - | = 1.8V | CONNECT CALIBRATOR TO 2100 INS RES TERMINALS |
| 250V | 150V | 1% | - | - | = 2.3V | CONNECT CALIBRATOR TO 2100 INS RES TERMINALS |
| 250V | 200V | 1% | - | - | = 2.8V | CONNECT CALIBRATOR TO 2100 INS RES TERMINALS |
| 250V | 250V | 1% | - | - | = 3.3V | CONNECT CALIBRATOR TO 2100 INS RES TERMINALS |
| 500V | 500V | 1% | - | - | = 5.8V | CONNECT CALIBRATOR TO 2100 INS RES TERMINALS |
| 1000V | 1000V | 1% | - | - | = 10.8V | CONNECT CALIBRATOR TO 2100 INS RES TERMINALS |



| TITLE | TEST | ACCURACY | | | READING | CONNECTIONS / NOTES |
|--|---------|----------|------|--------------|---------|--|
| | | % | % FS | ZERO = TOTAL | | |
| Insulation Resistance Current Measurement | | | | | | |
| 0.500mA | 0.500mA | 1% | - | = | 13uA | |
| 1.000mA | 1.000mA | 1% | - | = | 18uA | |
| Loop Resistance | | | | | | |
| Loop impedance was measured using 4 wire ohms connections between the earth pin of the 2100 supply lead and the UUT 13 AMP socket at the end of the supplied test adaptor lead. The supplied loop impedance was manually entered as zero and the system was nulled with the 2100 set to zero loop impedance. The recorded readings are the differences recorded from zero. | | | | | | |
| Loop Lead No | 1000a | - | 1000 | = | 1000a | |
| Loop Lead Resistance | 25mR | - | - | = | 25mR | |
| Loop Res. | 0.05R | 0.5% | 4mR | = | 4.3mR | Remove the positive lead from the calibrator, then plug back in when test begins |
| Loop Res. | 0.1R | 0.5% | 4mR | = | 4.5mR | Remove the positive lead from the calibrator, then plug back in when test begins |
| Loop Res. | 0.22R | 0.5% | 4mR | = | 5.1mR | Remove the positive lead from the calibrator, then plug back in when test begins |
| Loop Res. | 0.33R | 0.5% | 4mR | = | 5.7mR | Remove the positive lead from the calibrator, then plug back in when test begins |
| Loop Res. | 0.50R | 0.5% | 4mR | = | 6.5mR | Remove the positive lead from the calibrator, then plug back in when test begins |
| Loop Res. | 1R | 0.5% | 4mR | = | 9mR | Remove the positive lead from the calibrator, then plug back in when test begins |
| Loop Res. | 5R | 0.5% | 4mR | = | 29mR | Remove the positive lead from the calibrator, then plug back in when test begins |
| Loop Res. | 10R | 0.5% | 4mR | = | 54mR | Remove the positive lead from the calibrator, then plug back in when test begins |
| Loop Res. | 100R | 0.5% | 4mR | = | 504mR | Set-up using 4-Wire resistance method |
| Loop Res. | 1000R | 0.5% | 4mR | = | 5R | |



Transmillie 2100H Electrical Test Calibrator
PERFORMANCE VERIFICATION

| TITLE | TEST | ACCURACY | | | READING | CONNECTIONS / NOTES |
|-------|------|----------|------|--------------|---------|---------------------|
| | | % | % FS | ZERO = TOTAL | | |

RCD Current

| | | | | | | | |
|---------------|--------|----|---|-------|---|--------|--|
| 10mA @ 50Hz | 10mA | 1% | - | 0.1mA | = | 200uA | Connect 2100 to calibrator using RCD lead (custom test lead) |
| 30mA @ 50Hz | 30mA | 1% | - | 0.1mA | = | 400uA | |
| 100mA @ 50Hz | 90mA | 1% | - | 0.1mA | = | 1000uA | |
| 100mA @ 50Hz | 100mA | 1% | - | 0.1mA | = | 1.1mA | |
| 100mA @ 50Hz | 110mA | 1% | - | 0.1mA | = | 1.2mA | |
| 300mA @ 50Hz | 300mA | 1% | - | 1mA | = | 4mA | |
| 1000mA @ 50Hz | 1000mA | 1% | - | 1mA | = | 11mA | |
| 2000mA @ 50Hz | 2000mA | 1% | - | 1mA | = | 21mA | |

RCD Trip current

| | | | | | | |
|---------------------|-------|----|---|-----|---|-------|
| 150mA @ 300mA Range | 150mA | 1% | - | 1mA | = | 2.5mA |
|---------------------|-------|----|---|-----|---|-------|

RCD Trip time

| | | | | | | |
|-------|-------|---|---|-------|---|-------|
| 40ms | 40ms | - | - | 0.7ms | = | 700us |
| 400ms | 400ms | - | - | 0.7ms | = | 700us |

PAT : Insulation Resistance

The PAT Insulation Resistance is produced from the same decade resistance arm as used for the Insulation Resistance output. The following Tests are only to confirm the operation of the output switching. For the Full range of values, use the Insulation measurements on this certificate.

| | | | | | | |
|-----|-----|------|---|---|---|------|
| 1MR | 1MR | 0.1% | - | - | = | 1kR |
| 2MR | 2MR | 0.1% | - | - | = | 2kR |
| 4MR | 4MR | 0.1% | - | - | = | 4kR |
| 6MR | 6MR | 1% | - | - | = | 60kR |
| 8MR | 8MR | 1% | - | - | = | 80kR |



Transmillie 2100H Electrical Test Calibrator
PERFORMANCE VERIFICATION

| TITLE | TEST | ACCURACY | | | READING | CONNECTIONS / NOTES |
|--|-------|----------|------|------|---------|--|
| | | % | % FS | ZERO | | |
| | | | | | | |
| 10MR | 10MR | 1% | - | - | 100kR | |
| PAT : Earth Bond Resistance | | | | | | |
| The resistances recorded include the resistance of the | | | | | | |
| PAT test mains lead (approx 25milliohms) | | | | | | |
| PAT Lead No | 1000a | - | 1000 | = | 1000a | |
| PAT Lead Resistance | 25mR | - | - | = | 25mR | |
| Bond Res. | 0.00R | 0.5% | 4mR | = | 4mR | Connect using Earth bond lead to meter negs (connect both meter pos to PAT GND) |
| Bond Res. | 0.05R | 0.5% | 4mR | = | 4.3mR | |
| Bond Res. | 0.1R | 0.5% | 4mR | = | 4.5mR | |
| Bond Res. | 0.22R | 0.5% | 4mR | = | 5.1mR | |
| Bond Res. | 0.33R | 0.5% | 4mR | = | 5.7mR | |
| Bond Res. | 0.5R | 0.5% | 4mR | = | 6.5mR | |
| Bond Res. | 1R | 0.5% | 4mR | = | 9mR | |
| Bond Res. | 5R | 0.5% | 4mR | = | 29mR | |
| Bond Res. | 10R | 0.5% | 4mR | = | 54mR | |
| Bond Res. | 100R | 0.5% | 4mR | = | 504mR | |
| Bond Res. | 1000R | 0.5% | 4mR | = | 5R | |
| PAT : Earth Bond Current | | | | | | |
| 100mA @ 50Hz | 0.1A | 1.5% | - | = | 7.5mA | Connect to 9823 Low Amp Term. (Use Thick Test Leads between PAT Earth & PAT GND) |
| 10A @ 50Hz | 8A | 1.5% | - | = | 180mA | CONNECT TO CALIBRATOR 20 AMP TERMINALS |
| 10A @ 50Hz | 10A | 1.5% | - | = | 210mA | CONNECT TO CALIBRATOR 20 AMP TERMINALS |
| 20A @ 50Hz | 20A | 1.5% | - | = | 360mA | CONNECT TO CALIBRATOR 20 AMP TERMINALS |
| PAT: LOAD TESTS | | | | | | |
| S/C Test | 0R | - | 0.5R | = | 500mR | |
| O/C Test | PASS | - | - | = | | IS O/C AT O/C |



Transmille 2100H Electrical Test Calibrator
PERFORMANCE VERIFICATION

| TITLE | TEST | ACCURACY | | | READING | CONNECTIONS / NOTES |
|---------------------------|-------|----------|------|------|---------|------------------------|
| | | % | % FS | ZERO | | |
| 0.13KVA Test | 440R | 5% | - | - | 22R | |
| PAT: LEAKAGE CURRENT TEST | | | | | | |
| Leakage @ 240V | 2.0mA | 1.5% | - | - | 32uA | CONNECT LEADS AS SHOWN |
| Leakage @ 240V | 4.7mA | 1.5% | - | - | 72.5uA | |
| Leakage @ 240V | 7.7mA | 1.5% | - | - | 117.5uA | |
| End of results | | | | | | |



APPENDIX B

EXTENDED SPECIFICATIONS



3200 SERIES

ELECTRICAL TEST EQUIPMENT CALIBRATOR



DECLARATION OF CONFORMITY

CE

Manufacturer's Name: Transmille Ltd.
Manufacturer's Address: Unit 4, Select Business Centre
Lodge Road
Staplehurst
TN12 0QW.
United Kingdom.

Declares, that the product

Product Name: Electrical Test Calibrator
Model Number: 3200
Product Options:
This declaration covers all options of the above product(s)

Conforms with the following European Directives:

The product herewith complies with the requirements of the Low Voltage Directive 73/73EEC and the EMC Directive 89/336/EEC (including 93/68/EEC) and carries the CE Marking accordingly

Conforms with the following product standards:

EMC

IEC616326-1:1997+A1:1998 / EN 61326-1:1997+A1:1998 EN55011:1991

Standard

IEC 61000-4-2:1995+A1:1998 / EN 61000-4-2:1995
IEC 61000-4-3:1995 / EN 61000-4-3:1995
IEC 61000-4-4:1995 / EN 61000-4-4:1995
IEC 61000-4-5:1995 / EN 61000-4-5:1995
IEC 61000-4-6:1996 / EN 61000-4-6:1996
IEC 61000-4-11:1994 / EN 61000-4-11:1994

Limit

Group 1 Class A
4kV CD, 8kV AD
3 V/m, 80-1000 MHz
0.5kV signal lines, 1kV power lines
0.5kV line-line, 1kV line-ground
3V, 0.15-80 MHz 1 cycle, 100%
Dips: 30% 10ms; 60% 100ms
Interrupt > 95% @5000ms

SAFETY

IEC 61010-1:1990+A1:1992+A2:1995 / EN 61010-1:1993+A2:1995

06/03/2006

Date Of Issue



Managing Director

| | | |
|------------------------------|--|---|
| Warm Up Time | Double the time since last used up to 20 minutes maximum | |
| Standard Interfaces | RS232 | |
| Optional Interfaces | USB (Universal Serial Bus) | |
| Temperature Performance | Storage : -5°C to +60°C Operation : 0°C to +50°C | |
| Relative Humidity | Operation : <80% to 30°C, <70% to 40°C, <40% to 50°C Storage : <95%, non-condensing | |
| Altitude | Operation : 3000m (10,000ft) Maximum Transit : 12000m (40,000ft) Maximum | |
| EMC & Safety | The calibrator line input plug must be earthed See D.O.C for full details | |
| Line Power | Line Voltage Selectable : 110V / 230V Line Frequency : 50Hz to 60Hz Line Voltage Variation : -6% +10% | |
| Power Consumption | 28 Watts | |
| Connections | PAT Testing Connection | 1x IEC Plug |
| | LOOP & RCD Testing Connection | 1x UK / European / Australian type socket |
| | Insulation Tester Connection | 1xBlack : 1xRed 4mm Low Thermal Sockets |
| | PAT Ground Connection | 1x 4mm terminal post |
| | RS232 Interface | 1x Female 'D' type socket |
| RS232 Settings | Baud Rate | 9600 |
| | Parity | None |
| | Data Bits | 8 |
| | Stop Bits | 1 |
| Display Information | Type | Backlit Black on white film STN type |
| | Viewing Area | 124.3mm * 34mm |
| | Resolution | 256 * 94 dots |
| | Backlight Type | Cold fluorescent lamp |
| | Brightness | 70 to 90 cd/m ² |
| Indicators | PAT Testing Connection | Red LED above plug |
| | LOOP & RCD Testing Connection | Red LED above socket |
| | Insulation Tester Connection | Red LED above terminals |
| Keyboard | Membrane type with tactile feedback | |
| Fuses | Loop (Live) | 5A Anti-Surge |
| | Mains | 2A |
| | Loop (Neutral) | 5A Anti-Surge |
| | RCD | 2A |
| | ACV | 100mA |
| | PAT | 1A |
| | Insulation Resistance | 100mA |
| Isolation | Outputs are opto-isolated from mains earth and the RS-232 interface Maximum common mode voltage between earth and the low terminals 30 Volts ac/dc. | |
| Dimensions & Weights | Calibrator Only | 45cm x 44cm x 14cm : 10kgs |
| Warranty Period | 1 Year | |
| Recommended Service Interval | 1 Year | |
| Supplied Connections | 1x Serial Interface Connection 1x 1m PAT Test Lead | |
| Mounting Kit (optional) | 3U rack mount kit | |
| Case Colour | Cream (RAL9002) | |

Due to continuous development specifications may be subject to change.

Continuity Resistance*

Standard Accuracy - Relative to Calibration Standards Specifications

| Range | Type | Resolution | Accuracy | | |
|-------------|--------------------------|------------|----------|---|----|
| | | | % | ± | mΩ |
| 0.2Ω to 20Ω | Continuously Variable | 10mΩ | 1 | ± | 25 |
| 100Ω | Fixed | 10mΩ | 1 | ± | 25 |
| 1kΩ | Fixed | 10mΩ | 1 | ± | 25 |

High Accuracy (option) - Relative to Calibration Standards Specifications

| Range | Type | Resolution | Accuracy | | |
|-------------|--------------------------|------------|----------|---|----|
| | | | % | ± | mΩ |
| 0.2Ω to 20Ω | Continuously Variable | 10mΩ | 0.25 | ± | 25 |
| 100Ω | Fixed | 10mΩ | 0.25 | ± | 25 |
| 1kΩ | Fixed | 10mΩ | 0.25 | ± | 25 |

* Maximum Test Current 300mA

Test current maximum can be exceeded for a maximum of 5 seconds

Continuity Current Measurement

Accuracy - Relative to Calibration Standards Specifications

| Range | Load | Accuracy | | |
|------------|------|----------|---|--------|
| | | % | ± | Counts |
| 0 to 320mA | 1Ω | 1.3 | ± | 6 |

Due to continuous development specifications may be subject to change.

Insulation Resistance

Standard Accuracy - Relative to Calibration Standards Specifications

| Range | Type | Resolution | Maximum Voltage/Power ¹ | Accuracy % |
|------------|-----------------------|------------|------------------------------------|------------|
| 0Ω to 5MΩ | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 0.3 |
| 5MΩ to 2GΩ | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 3 |

High Accuracy (option) - Relative to Calibration Standards Specifications

| Range | Type | Resolution | Maximum Voltage/Power ¹ | Accuracy % |
|------------|-----------------------|------------|------------------------------------|------------|
| 0Ω to 5MΩ | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 0.1 |
| 5MΩ to 2GΩ | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 1 |

Note 1 : A 5kV option is available for Insulation Testers incorporating *Active Guard*.

10GΩ Range (Option) - Relative to Calibration Standards Specifications

| Range | Type | Resolution | Maximum Voltage/Power ¹ | Accuracy % |
|----------------------|-----------------------|------------|------------------------------------|------------|
| 2GΩ to 10GΩ (Option) | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 5 |

Note : Can be fitted to Standard or High accuracy models

Insulation Test Voltage Measurement

Accuracy - Relative to Calibration Standards Specifications

| Ranges | Current Measurement | Resolution | Accuracy | | |
|--------------------------------|---------------------|------------|----------|---|--------|
| | | | % | ± | Counts |
| 50V • 100V • 250V • 500V • 1kV | 0.5mA • 1mA | 0.1V | 1 | ± | 8 |

AC Voltage Output

Accuracy - Relative to Calibration Standards Specifications

| Ranges | Accuracy | | |
|----------------------------------|----------|---|--------|
| | % | ± | Counts |
| 100V • 200V • 230V • 300V • 400V | 0.2 | ± | 1 |

Resistance Multiplier Option 5KV

Multiplies resistance output of 3200 by 100

Accuracy - Relative to Calibration Standards Specifications

| Range | Resolution | Maximum Voltage Peak AC+DC | Accuracy |
|-----------------------------|------------|----------------------------|--------------------------|
| 1GOhm to 1TOhm ¹ | 1MOhm | 10kV | 1.50% ± R ^{CAL} |

¹ Requires 10GOhm Option fitted to 3200, otherwise maximum resistance = 200GOhms

R^{CAL} = Resistance set on 3200

Due to continuous development specifications may be subject to change.

RCD Time

Accuracy - Relative to Calibration Standards Specifications

| Range | Resolution |
|------------|------------|
| 20ms to 5s | 10ms |

RCD (Residual Current Device) Current

Trip Current Range 0.5 to 3000mA

Current Multiplier 0.5, 1, 2, 5

3200 Keypad Input : 1mA to 1000mA in 1mA steps

Accuracy - Relative to Calibration Standards Specifications

| Range | Resolution | Time Interval* | Series Resistance | Accuracy | | |
|-----------------|------------|--------------------|-------------------|----------|---|--------|
| | | | | % | ± | Counts |
| 3mA to 10mA | 0.01mA | up to 5s <190ms | 100Ohms | 1.2 | ± | 6 |
| | | | | 5 | ± | 20 |
| 10.1mA to 100mA | 0.01mA | up to 5s <190ms | 10Ohms | 1.2 | ± | 6 |
| | | | | 5 | ± | 20 |
| 101mA to 1A | 0.1mA | up to 5s <190ms | 1Ohm | 1.2 | ± | 6 |
| | | | | 5 | ± | 20 |
| 1.01A to 3A | 1mA | up to 5s <190ms | 0.1Ohm | 1.2 | ± | 6 |
| | | | | 5 | ± | 20 |

Range selection automatic, depending on trip value : All ranges 15% Overrange

| Additional Features | |
|---------------------|------------------------------------|
| Timing Modes | Immediate • Zero Crossing |
| Current Modes | ½I • I • 2I • 5I |
| Display Modes | 0°, 180° of Phase & Half Wave / DC |

Intelligent Protection :

The 3200 incorporates a pre-test scan where power is ramped up to the UUT - the test is automatically aborted if a faulty UUT is detected.

This avoids further damage to the UUT and safeguards the 3200.

*Current measurement modes :

Above 200ms : DC coupled True RMS allowing accurate measurement of both sinusoidal current and half wave (positive or negative)

Intelligent firmware captures and analyses the current waveform automatically discarding pre-test (no-trip) currents and switch on spikes automatically capturing and measuring only the true test current.

Fast Mode (Below 200ms) : Peak capture divided by 1.41 to give mathematically calculated RMS for sinusoidal only

RCD Current Duration

RCD current duration is the measurement of the period the fault current flows

| RCD Current Duration | |
|----------------------|------------|
| Measurement Range | 10ms to 5s |
| Resolution | 0.1ms |
| Timing Accuracy | 0.4ms |

Due to continuous development specifications may be subject to change.

Loop Resistance

Accuracy - Relative to Calibration Standards Specifications

| Nominal Resistance Values | Resolution | Accuracy | | |
|---------------------------|------------|----------|---|----|
| | | % | ± | mΩ |
| 0.05Ω | 0.1mΩ | 0.5 | ± | 4 |
| 0.1Ω | 0.1mΩ | 0.5 | ± | 4 |
| 0.22Ω | 0.1mΩ | 0.5 | ± | 4 |
| 0.33Ω | 0.1mΩ | 0.5 | ± | 4 |
| 0.5Ω | 0.1mΩ | 0.5 | ± | 4 |
| 1Ω | 0.1mΩ | 0.5 | ± | 4 |
| 5Ω | 0.1mΩ | 0.5 | ± | 4 |
| 10Ω | 0.1mΩ | 0.5 | ± | 4 |
| 100Ω | 1mΩ | 0.5 | ± | 4 |
| 1kΩ | 1mΩ | 0.5 | ± | 4 |

Power Dissipation :

All resistors are 50W : Maximum test current for 200ms = 40A
 Thermal protection is provided in the event of overheating.

Intelligent Protection :

The 3200 incorporates a pre-test scan where power is ramped up to the UUT - the test is automatically aborted if a faulty UUT is detected.
 This avoids further damage to the UUT and safeguards the 3200.

Manual Loop Correction

Correction range 0.001 to 2 Ohms - manually entered using 3200 keypad

Auto Loop (Option)

The auto loop function automatically corrects for supplied loop impedance.

| | |
|---------------------|-------|
| Maximum Correction | 2Ω |
| Resolution | 100uΩ |
| Accuracy | ±18mΩ |
| Measurement Current | 4A |

Due to continuous development specifications may be subject to change.

All PAT functions are isolated from mains earth to enable calibration of PAT testers which cannot function with connections to ground.

PAT Earth Bond Resistance

Accuracy - Relative to Calibration Standards Specifications

| Nominal Resistance Values | Resolution | Accuracy | | |
|---------------------------|------------|----------|---|----|
| | | % | ± | mΩ |
| 0.05Ω | 0.1mΩ | 0.5 | ± | 4 |
| 0.1Ω | 0.1mΩ | 0.5 | ± | 4 |
| 0.22Ω | 0.1mΩ | 0.5 | ± | 4 |
| 0.33Ω | 0.1mΩ | 0.5 | ± | 4 |
| 0.5Ω | 0.1mΩ | 0.5 | ± | 4 |
| 1Ω | 0.1mΩ | 0.5 | ± | 4 |
| 5Ω | 0.1mΩ | 0.5 | ± | 4 |
| 10Ω | 0.1mΩ | 0.5 | ± | 4 |
| 100Ω | 1mΩ | 0.5 | ± | 4 |
| 1kΩ | 1mΩ | 0.5 | ± | 4 |

PAT Earth Bond Current Measurement

| Range | Resolution | Accuracy | | |
|-------|------------|----------|---|--------|
| | | % | ± | Counts |
| 100mA | 1mA | 1.5 | ± | 6 |
| 10A | 10mA | 1.5 | ± | 6 |
| 30A | 10mA | 1.5 | ± | 6 |

PAT Insulation Resistance

Standard Accuracy - Relative to Calibration Standards Specifications

| Range | Type | Resolution | Maximum Voltage/Power ¹ | Accuracy % |
|------------|-----------------------|------------|------------------------------------|------------|
| 0Ω to 5MΩ | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 0.3 |
| 5MΩ to 2GΩ | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 3 |

High Accuracy (Option) - Relative to Calibration Standards Specifications

| Range | Type | Resolution | Maximum Voltage/Power ¹ | Accuracy % |
|------------|-----------------------|------------|------------------------------------|------------|
| 0Ω to 5MΩ | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 0.1 |
| 5MΩ to 2GΩ | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 1 |

PAT Leakage Current

| Range | Resolution | Accuracy | | |
|-------|------------|----------|---|--------|
| | | % | ± | Counts |
| 2mA | 1uA | 1.5 | ± | 2 |
| 4.7mA | 1uA | 1.5 | ± | 2 |
| 7.7mA | 1uA | 1.5 | ± | 2 |

Due to continuous development specifications may be subject to change.

PAT Leakage Test Voltage

| Range (RMS) | Resolution | Accuracy | | |
|----------------|------------|----------|---|--------|
| | | % | ± | Counts |
| 100V to 300V | 0.1V | 1.5 | ± | 9 |

PAT Load Testing

| Range | Accuracy | | |
|---------------|----------|---|---|
| | Ohms | ± | % |
| Short Circuit | - | - | - |
| Open Circuit | - | - | - |
| 0.13kW | 440Ω | ± | 5 |

PAT Flash Voltage Measurement

| Class | Range | Resolution | Load Resistance | Accuracy | | |
|------------------------|--------------|------------|------------------------|----------|---|--------|
| | | | | % | ± | Counts |
| Class 1 (1.5kV) | 1kV to 1.8kV | 1V | 600kΩ (2.5mA@1.5kV) | 4 | ± | 10 |
| Class 2 (3kV) | 2kV to 3.6kV | 1V | 1.2MΩ (2.5mA@3kV) | 4 | ± | 10 |

PAT Flash Current Measurement

| Range | Resolution | Accuracy |
|------------|------------|----------|
| | | % |
| 1mA to 3mA | 10uA | 5 |

Due to continuous development specifications may be subject to change.

Line Voltage Measurement

| Range | Resolution | Accuracy |
|--------------|------------|---------------------|
| 200V to 260V | 0.1V | 0.8% \pm 6 Counts |

Due to continuous development specifications may be subject to change.

AC/DC VOLTAGE MEASUREMENT

| Range | Resolution | Accuracy (1 Year Rel.) | | |
|-------|------------|------------------------|---|--------|
| | | % | ± | Counts |
| 3kV | 10V | 0.5 | ± | 3 |
| 12kV | 10V | 0.5 | ± | 3 |

AC/DC CURRENT MEASUREMENT

| Range | Resolution | Accuracy (1 Year Rel.) | | |
|-------|------------|------------------------|---|--------|
| | | % | ± | Counts |
| 200uA | 100nA | 0.5 | ± | 4 |
| 2mA | 1uA | 0.5 | ± | 3 |
| 20mA | 10uA | 0.5 | ± | 3 |

Due to continuous development specifications may be subject to change.

2100 ELECTRICAL TEST EQUIPMENT CALIBRATOR

INTEGRATED ELECTRICAL EQUIPMENT CALIBRATION SOLUTION



EXTENDED SPECIFICATIONS



TRANSMILLE LTD., UNIT 4 SELECT BUSINESS CENTRE, LODGE ROAD, STAPLEHURST, KENT. TN12 0QW. UK.
www.transmille.com : sales@transmille.com : Tel : +44 (0) 1580 890700 : Fax : +44 (0) 1580 890711

DECLARATION OF CONFORMITY CE

Manufacturer's Name: Transmille Ltd.
Manufacturer's Address: Unit 4, Select Business Centre
Lodge Road
Staplehurst
TN12 0QW

Declares, that the product

Product Name: Electrical Test Calibrator
Model Number: 2100
Product Options: This declaration covers all options of the above product(s)

Conforms with the following European Directives:

The product herewith complies with the requirements of the Low Voltage Directive 73/73EEC and the EMC Directive 89/336/EEC (including 93/68/EEC) and carries the CE Marking accordingly

Conforms with the following product standards:

EMC

Standard

Limit

IEC616326-1:1997+A1:1998 / EN 61326-1 :1997+A1:1998 EN55011:1991

IEC 61000-4-2:1995+A1:1998 / EN 61000-4-2:1995 Group 1 Class A

IEC 61000-4-3:1995 / EN 61000-4-3:1995 4kV CD, 8kV AD

IEC 61000-4-4:1995 / EN 61000-4-4:1995 3 V/m, 80-1000 MHz

IEC 61000-4-5:1995 / EN 61000-4-5:1995 0.5kV signal lines, 1kV power lines

IEC 61000-4-6:1996 / EN 61000-4-6:1996 0.5kV line-line, 1kV line-ground

IEC 61000-4-11:1994 / EN 61000-4-11:1994 3V, 0.15-80 MHz 1 cycle, 100%

Dips: 30% 10ms; 60% 100ms

Interrupt > 95%@5000ms

SAFETY

IEC 61010-1:1990+A1:1992+A2:1995 / EN 61010-1:1993+A2:1995

12/12/2001



Revision No: 1.1
Date :12/12/2001

Managing Director

2100 General Specifications

TRANSMILLE
Solutions In Calibration

| | | |
|------------------------------|--|---|
| Warm Up Time | Double the time since last used up to 20 minutes maximum | |
| Standard Interfaces | RS232 | |
| Optional Interfaces | USB (Universal Serial Bus) | |
| Temperature Performance | Storage : -5°C to +60°C Operation : 0°C to +50°C | |
| Relative Humidity | Operation : <80% to 30°C, <70% to 40°C, <40% to 50°C Storage : <95%, non-condensing | |
| Altitude | Operation : 3000m (10,000ft) Maximum Transit : 12000m (40,000ft) Maximum | |
| EMC & Safety | The calibrator line input plug must be earthed See D.O.C for full details | |
| Line Power | Line Voltage Selectable : 110V / 230V Line Frequency : 50Hz to 60Hz Line Voltage Variation : -6% +10% | |
| Power Consumption | 28 Watts | |
| Connections | PAT Testing Connection | 1x IEC Plug |
| | LOOP & RCD Testing Connection | 1x IEC Socket |
| | Insulation Tester Connection | 1xBlack : 1xRed 4mm Low Thermal Sockets |
| | PAT Ground Connection | 1x Blue 4mm terminal post |
| | RS232 Interface | 1x Female 'D' type socket |
| RS232 Settings | Baud Rate | 9600 |
| | Parity | None |
| | Data Bits | 8 |
| | Stop Bits | 1 |
| Display Information | Type | Backlit Black on white film STN type |
| | Viewing Area | 124.3mm * 34mm |
| | Resolution | 256 * 94 dots |
| | Backlight Type | Cold fluorescent lamp |
| | Brightness | 70 to 90 cd/m ² |
| Indicators | PAT Testing Connection | Red LED above plug |
| | LOOP & RCD Testing Connection | Red LED above socket |
| | Insulation Tester Connection | Red LED above terminals |
| Keyboard | Membrane type with tactile feedback | |
| Fuses | Loop (Live) | 5A Anti-Surge |
| | Mains | 2A |
| | Loop (Neutral) | 5A Anti-Surge |
| | RCD | 2A |
| | ACV | 100mA |
| | PAT | 1A |
| | Insulation Resistance | 100mA |
| Isolation | Outputs are opto-isolated from mains earth and the RS-232 interface Maximum common mode voltage between earth and the low terminals 30 Volts ac/dc. | |
| Dimensions & Weights | Calibrator Only | 14cm x 43cm x 46cm : 8kgs |
| | Calibrator in Shipping Box | 58cm x 56cm x 37cm : 10.5kgs |
| | Calibrator in Soft Carry Case | 49cm x 50cm x 19cm : 11.5kgs |
| | Calibrator in Hard Transit case | 55cm x 56cm x 26cm : 19kgs |
| Warranty Period | 3 Years (Parts & Labour) | |
| Recommended Service Interval | 1 Year | |
| Supplied Connections | 1x Serial Interface Connection 1x RCD / LOOP Adaptor Lead ; 1x 1m PAT Test Lead | |
| Mounting Kit (optional) | 3U rack mount kit | |
| Case Colour | Matt Dark Grey (RAL7016) | |

Due to continuous development specifications may be subject to change.

Continuity Resistance

Standard Accuracy - Relative to Calibration Standards Specifications

| Range | Type | Resolution | Accuracy | | |
|-------------|--------------------------|------------|----------|---|----|
| | | | % | ± | mW |
| 0.1Ω to 20Ω | Continuously Variable | 10mΩ | 1 | ± | 25 |
| 100Ω | Fixed | 10mΩ | 1 | ± | 25 |
| 1kΩ | Fixed | 10mΩ | 1 | ± | 25 |

High Accuracy (option) - Relative to Calibration Standards Specifications

| Range | Type | Resolution | Accuracy | | |
|-------------|--------------------------|------------|----------|---|----|
| | | | % | ± | mW |
| 0.1Ω to 20Ω | Continuously Variable | 10mΩ | 0.25 | ± | 25 |
| 100Ω | Fixed | 10mΩ | 0.25 | ± | 25 |
| 1kΩ | Fixed | 10mΩ | 0.25 | ± | 25 |

Continuity Current Measurement

Accuracy - Relative to Calibration Standards Specifications

| Range | Load | Accuracy | | |
|------------|------|----------|---|--------|
| | | % | ± | Counts |
| 0 to 320mA | 1Ω | 1.3 | ± | 6 |

Due to continuous development specifications may be subject to change.

Insulation Resistance

Standard Accuracy - Relative to Calibration Standards Specifications

| Range | Type | Resolution | Maximum Voltage/Power ¹ | Accuracy % |
|------------|-----------------------|------------|------------------------------------|------------|
| 0Ω to 5MΩ | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 0.3 |
| 5MΩ to 2GΩ | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 3 |

High Accuracy (option) - Relative to Calibration Standards Specifications

| Range | Type | Resolution | Maximum Voltage/Power ¹ | Accuracy % |
|------------|-----------------------|------------|------------------------------------|------------|
| 0Ω to 5MΩ | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 0.1 |
| 5MΩ to 2GΩ | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 1 |

Note 1 : A 5kV option is available for Insulation Testers incorporating *Active Guard*.

10GW Range (Option) - Relative to Calibration Standards Specifications

| Range | Type | Resolution | Maximum Voltage/Power ¹ | Accuracy % |
|----------------------|-----------------------|------------|------------------------------------|------------|
| 2GΩ to 10GΩ (Option) | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 5 |

Note : Can be fitted to Standard or High accuracy models

Insulation Test Voltage Measurement

Accuracy - Relative to Calibration Standards Specifications

| Ranges | Current Measurement | Resolution | Accuracy | | |
|--------------------------------|---------------------|------------|----------|---|--------|
| | | | % | ± | Counts |
| 50V • 100V • 250V • 500V • 1kV | 0.5mA • 1mA | 0.1V | 1 | ± | 8 |

AC Voltage Output

Accuracy - Relative to Calibration Standards Specifications

| Ranges | Accuracy | | |
|----------------------------------|----------|---|--------|
| | % | ± | Counts |
| 100V • 200V • 230V • 300V • 400V | 0.2 | ± | 1 |

RCD Time

Accuracy - Relative to Calibration Standards Specifications

| Range | Resolution | Accuracy |
|------------|------------|----------|
| 20ms to 5s | 10ms | ± 0.7ms |

RCD Current

Accuracy - Relative to Calibration Standards Specifications

| Range | Resolution | | Accuracy | | | |
|-----------|------------|-------|----------|-----|---|--------|
| | to 200mA | to 3A | Setting | % | ± | Counts |
| 3mA to 3A | 0.01mA | 0.1mA | <190ms | 5 | ± | 20 |
| | | | up to 5s | 1.2 | ± | 6 |

| Additional Features | |
|----------------------|---------------------------|
| Timing Modes | Immediate • Zero Crossing |
| Current Modes | ½I • I • 2I • 5I |
| Display Modes | 0° and 180° of Phase |

Due to continuous development specifications may be subject to change.

Loop Resistance

Standard Accuracy - Relative to Calibration Standards Specifications

| Nominal Resistance Values | Resolution | Accuracy | | |
|------------------------------|------------|----------|---|----|
| | | % | ± | mW |
| 0.05Ω | 0.1mΩ | 0.5 | ± | 4 |
| 0.1Ω | 0.1mΩ | 0.5 | ± | 4 |
| 0.22Ω | 0.1mΩ | 0.5 | ± | 4 |
| 0.33Ω | 0.1mΩ | 0.5 | ± | 4 |
| 0.5Ω | 0.1mΩ | 0.5 | ± | 4 |
| 1Ω | 0.1mΩ | 0.5 | ± | 4 |
| 5Ω | 0.1mΩ | 0.5 | ± | 4 |
| 10Ω | 0.1mΩ | 0.5 | ± | 4 |
| 100Ω | 1mΩ | 0.5 | ± | 4 |
| 1kΩ | 1mΩ | 0.5 | ± | 4 |

Auto Loop (Option)

The auto loop function automatically corrects for supplied loop impedance.

| | |
|---------------------|-------|
| Maximum Correction | 2Ω |
| Resolution | 100uΩ |
| Accuracy | ±18mΩ |
| Measurement Current | 4A |

Due to continuous development specifications may be subject to change.

PAT Earth Bond Resistance

Standard Accuracy - Relative to Calibration Standards Specifications

| Nominal Resistance Values | Resolution | Accuracy | | |
|---------------------------|------------|----------|---|----|
| | | % | ± | mW |
| 0.05Ω | 0.1mΩ | 0.5 | ± | 4 |
| 0.1Ω | 0.1mΩ | 0.5 | ± | 4 |
| 0.22Ω | 0.1mΩ | 0.5 | ± | 4 |
| 0.33Ω | 0.1mΩ | 0.5 | ± | 4 |
| 0.5Ω | 0.1mΩ | 0.5 | ± | 4 |
| 1Ω | 0.1mΩ | 0.5 | ± | 4 |
| 5Ω | 0.1mΩ | 0.5 | ± | 4 |
| 10Ω | 0.1mΩ | 0.5 | ± | 4 |
| 100Ω | 1mΩ | 0.5 | ± | 4 |
| 1kΩ | 1mΩ | 0.5 | ± | 4 |

PAT Earth Bond Current Measurement

| Range | Resolution | Accuracy | | |
|-------|------------|----------|---|--------|
| | | % | ± | Counts |
| 100mA | 1mA | 1.5 | ± | 6 |
| 10A | 10mA | 1.5 | ± | 6 |
| 30A | 10mA | 1.5 | ± | 6 |

PAT Insulation Resistance

Standard Accuracy - Relative to Calibration Standards Specifications

| Range | Type | Resolution | Maximum Voltage/Power ¹ | Accuracy % |
|------------|-----------------------|------------|------------------------------------|------------|
| 0Ω to 5MΩ | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 0.3 |
| 5MΩ to 2GΩ | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 3 |

High Accuracy (Option) - Relative to Calibration Standards Specifications

| Range | Type | Resolution | Maximum Voltage/Power ¹ | Accuracy % |
|------------|-----------------------|------------|------------------------------------|------------|
| 0Ω to 5MΩ | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 0.1 |
| 5MΩ to 2GΩ | Continuously Variable | 10kΩ | 1.1kV or 1 Watt | 1 |

PAT Leakage Current

| Range | Resolution | Accuracy | | |
|-------|------------|----------|---|--------|
| | | % | ± | Counts |
| 240uA | 1uA | 1.5 | ± | 2 |
| 1mA | 1uA | 1.5 | ± | 2 |
| 3mA | 1uA | 1.5 | ± | 2 |

PAT Leakage Test Voltage

| Range (RMS) | Resolution | Accuracy | | |
|----------------|------------|----------|---|--------|
| | | % | ± | Counts |
| 100V to 300V | 0.1V | 1.5 | ± | 9 |

PAT Load Testing

| Range | Accuracy | | |
|---------------|----------|---|---|
| | Ohms | ± | % |
| Short Circuit | - | - | - |
| Open Circuit | - | - | - |
| 0.13kW | 440Ω | ± | 5 |

PAT Flash Voltage Measurement

| Class | Range | Resolution | Load Resistance | Accuracy | | |
|------------------------|--------------|------------|------------------------|----------|---|--------|
| | | | | % | ± | Counts |
| Class 1 (1.5kV) | 1kV to 1.8kV | 1V | 600kΩ (2.5mA@1.5kV) | 4 | ± | 10 |
| Class 2 (3kV) | 2kV to 3.6kV | 1V | 1.2MΩ (2.5mA@3kV) | 4 | ± | 10 |

PAT Flash Current Measurement

| Range | Resolution | Accuracy |
|------------|------------|----------|
| | | % |
| 1mA to 3mA | 10uA | 5 |

Due to continuous development specifications may be subject to change.

Line Voltage Measurement

| Range | Resolution | Accuracy |
|--------------|------------|-----------------|
| 200V to 260V | 0.1V | 0.8% ± 6 Counts |

Due to continuous development specifications may be subject to change.